 
 
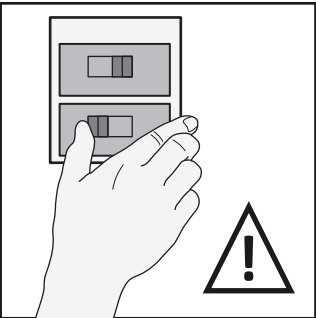 


Installation Instructions

 
For Vista Spot and Flood

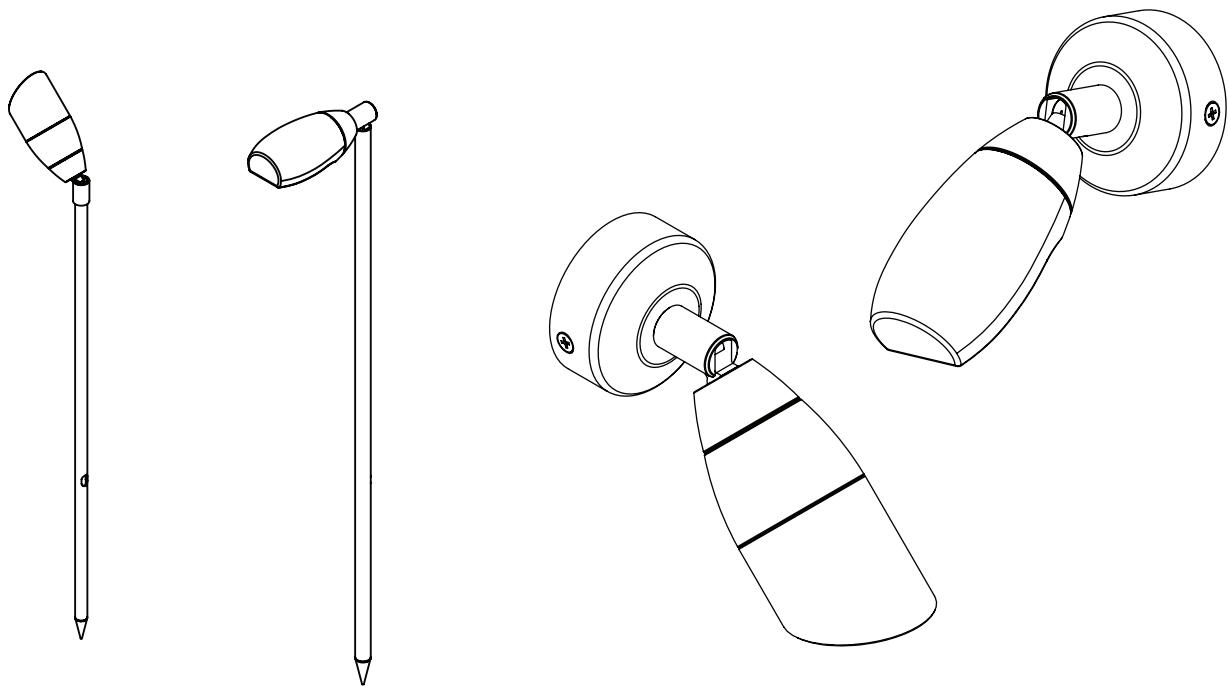


Switch off mains power before installation.

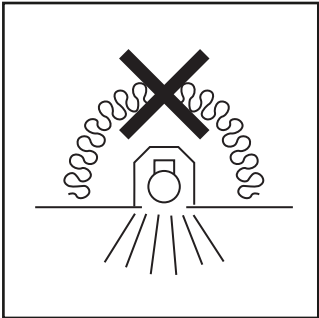

Do not cover luminaire with insulation material.

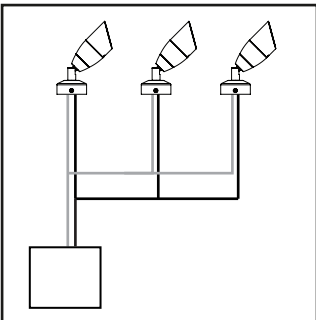

 Products must be parallel wired. See page 5 for details.

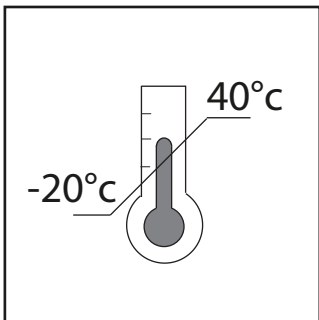

Max ambient temperature 40°C,
Min ambient temperature -20°C.

- Please read the following instructions carefully.
- Follow all national and local wiring and safety regulations.

Connecting or disconnecting these luminaires while powered will damage the LED.

- These products should only be installed by a qualified electrician.

 
 
 
The light source contained in these luminaires shall only be replaced by the manufacturer, their service agent or a similarly qualified person.

All outdoor wiring connections must be made with waterproof and weatherproof connectors.


- These products require an LED power supply-
DO NOT CONNECT DIRECTLY TO MAINS POWER!
- Retain these instructions for future reference.

Installation Instructions- Vista Spike


For Vista Spot and Flood

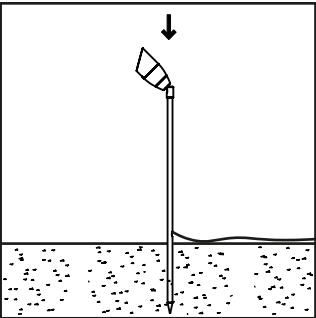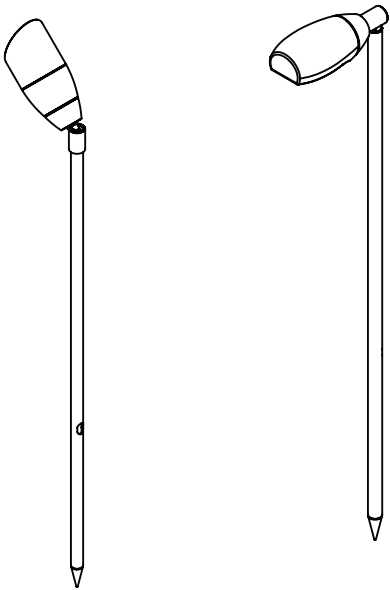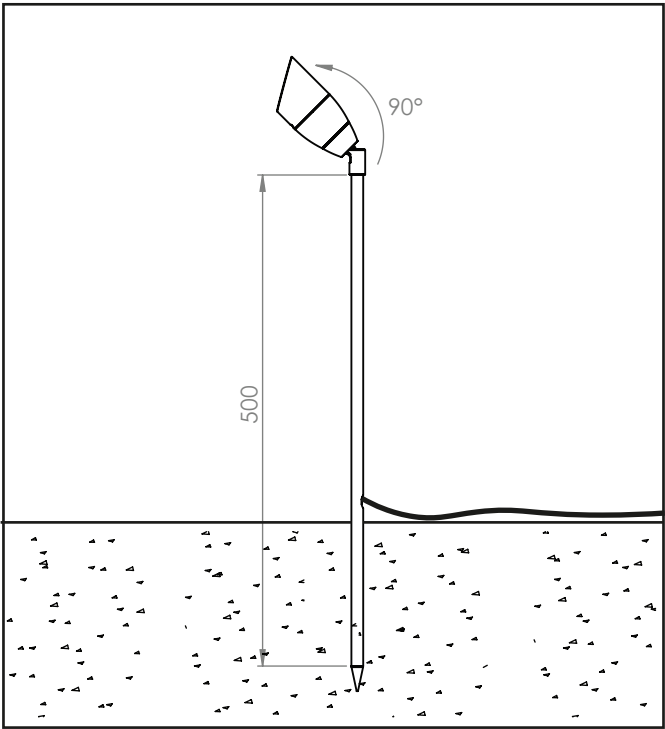

 1. Insert spike into ground.

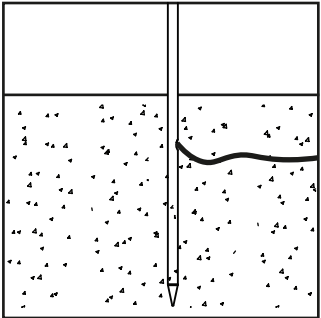


 2. Cable can be buried, but be careful not to damage the outer sleeving.

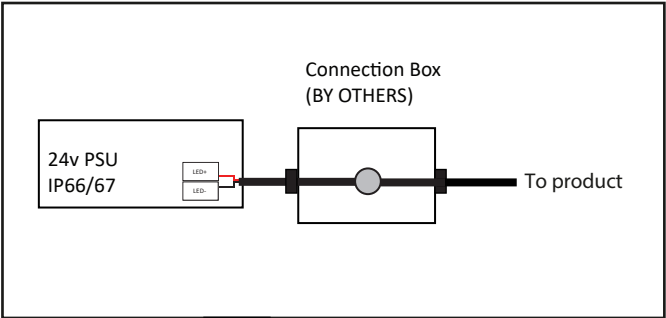


3. Connect product to 24v power supply. If power supply is located outside it must be housed in an appropriate enclosure.

 Installation Instructions- Ground Anchor

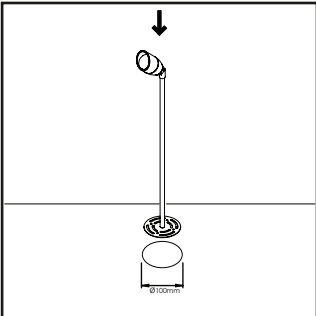

 
5. Make hole in ground Ø100mm to required depth.

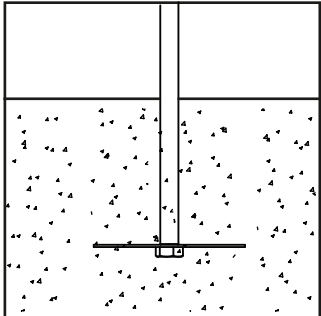



6. Fill in hole with soil to anchor fitting to the ground.

Installation Instructions- Vista Wall Mounting

 
For Vista Spot and Flood

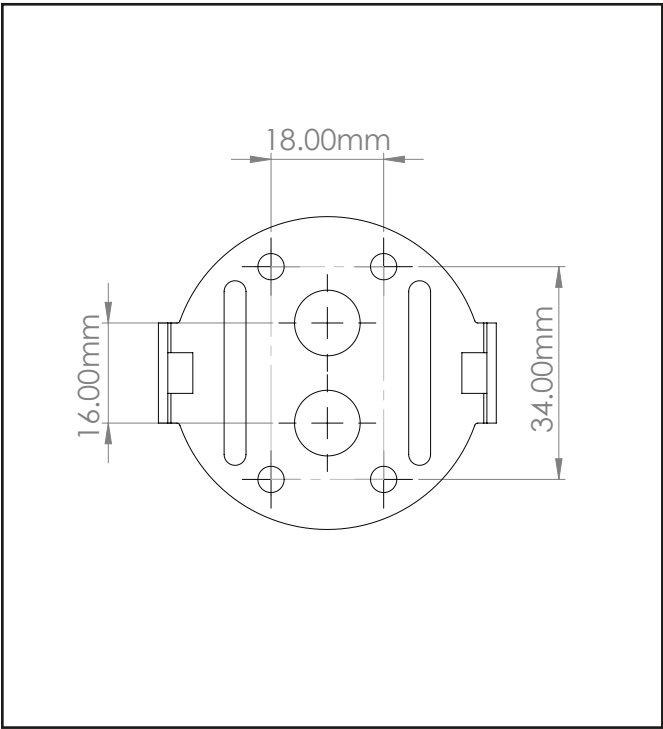


Backplate fixing positions.

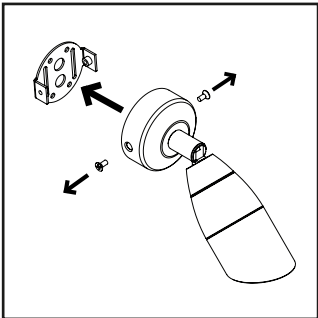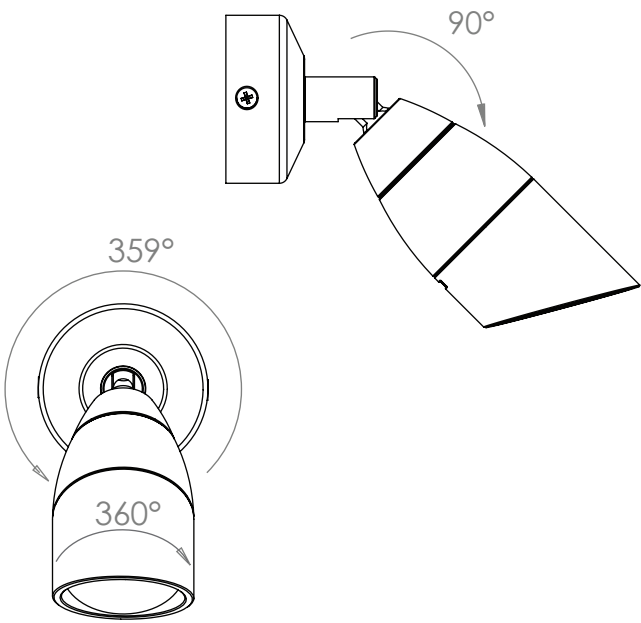  

 
1. Remove backplate from fitting.

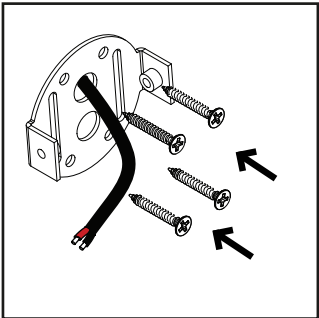

 2. Feed-through connecting cable and install backplate onto surface.

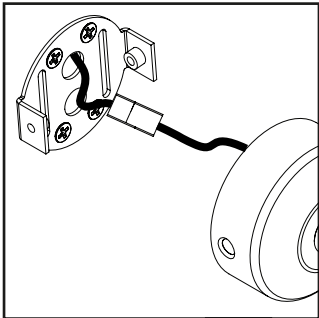


 3. Make watertight connection.

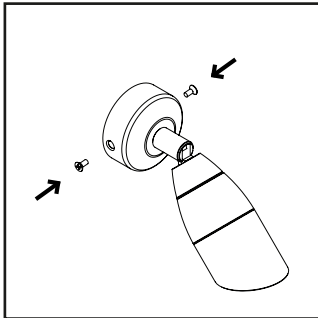


4. Attached fitting to backplate.

 
Installation Instructions- Tree Mounting

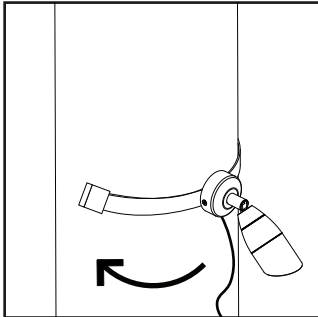

 5. Wrap tree strap around tree. Secure at back.

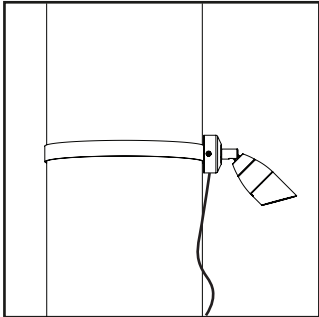


 6. Position fitting as desired.

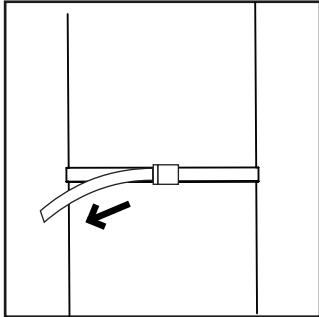


7. Pull loose strap through buckle at back to tighten.

 Accessories
For Vista Spot

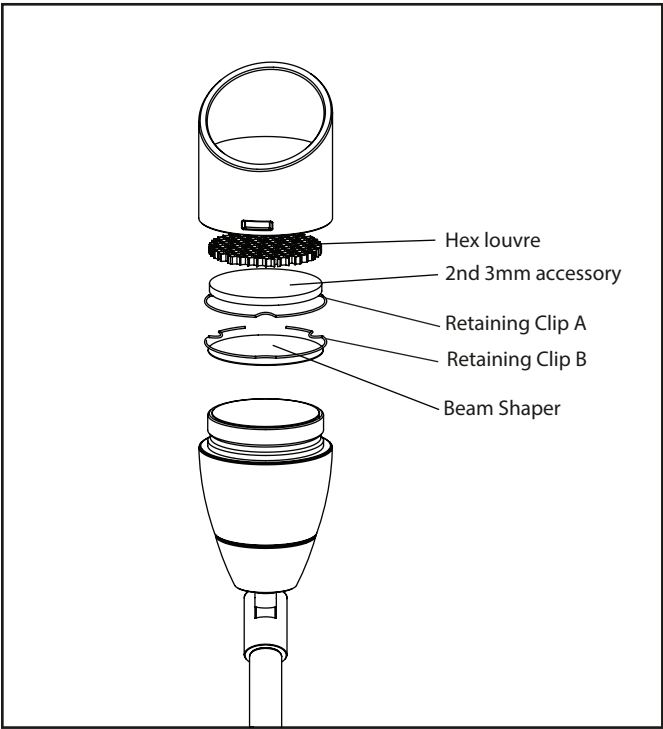


Accessory Locations.

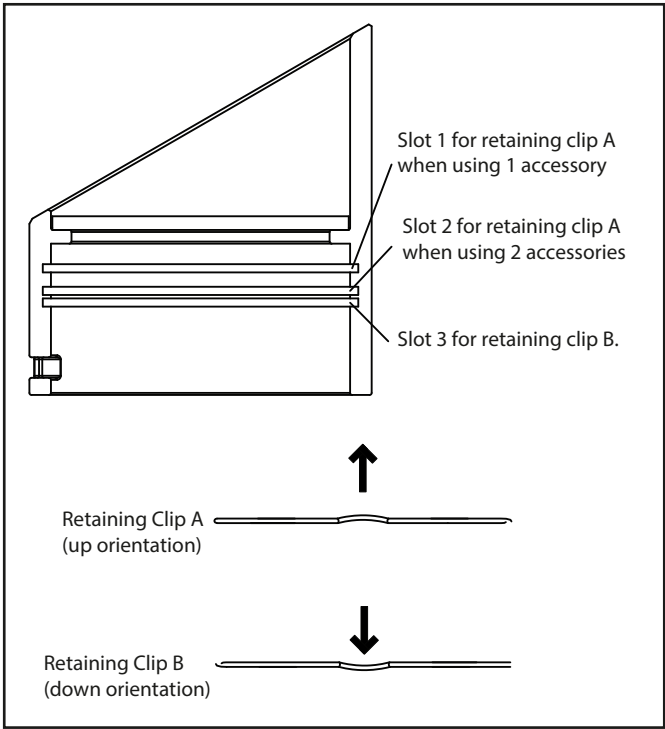 


Retaining clip locations. Retaining clip A should always be used in the up orientation. Retaining clip B should always be used in the down orientation.

 
Removing cowl:

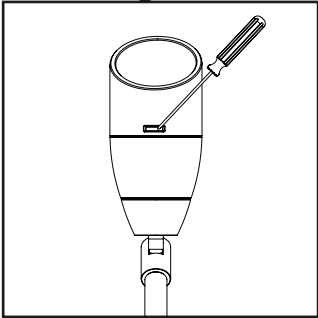

 
1. Press down on locking wire with tool and hold in place.

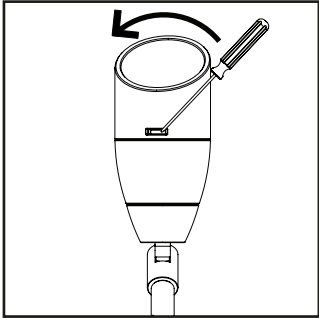

 
2. Rotate cowl until end of locking wire is visible.

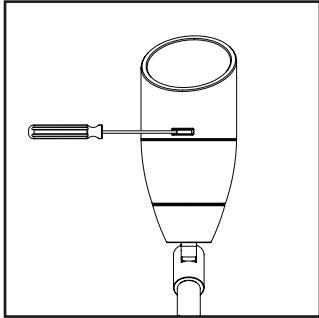

 
3. Place tool under locking wire and lift up.

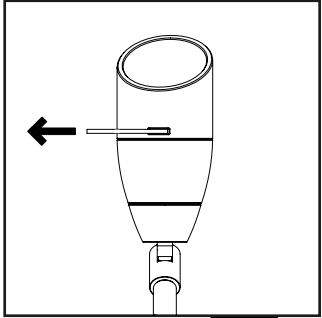

 4. Take hold of end of locking wire and pull out.

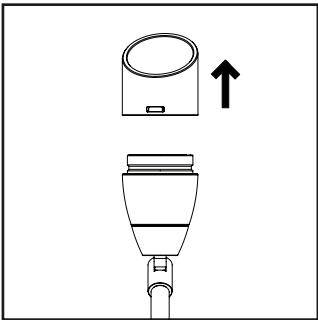


 5. Remove cowl.

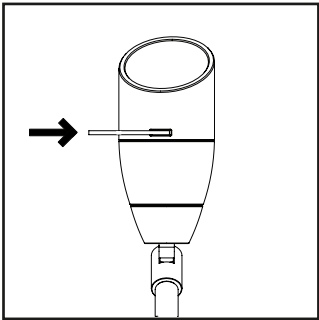


6. Return locking wire to original position when re-assembling.

 Wiring Diagram
For Vista Spot and Flood

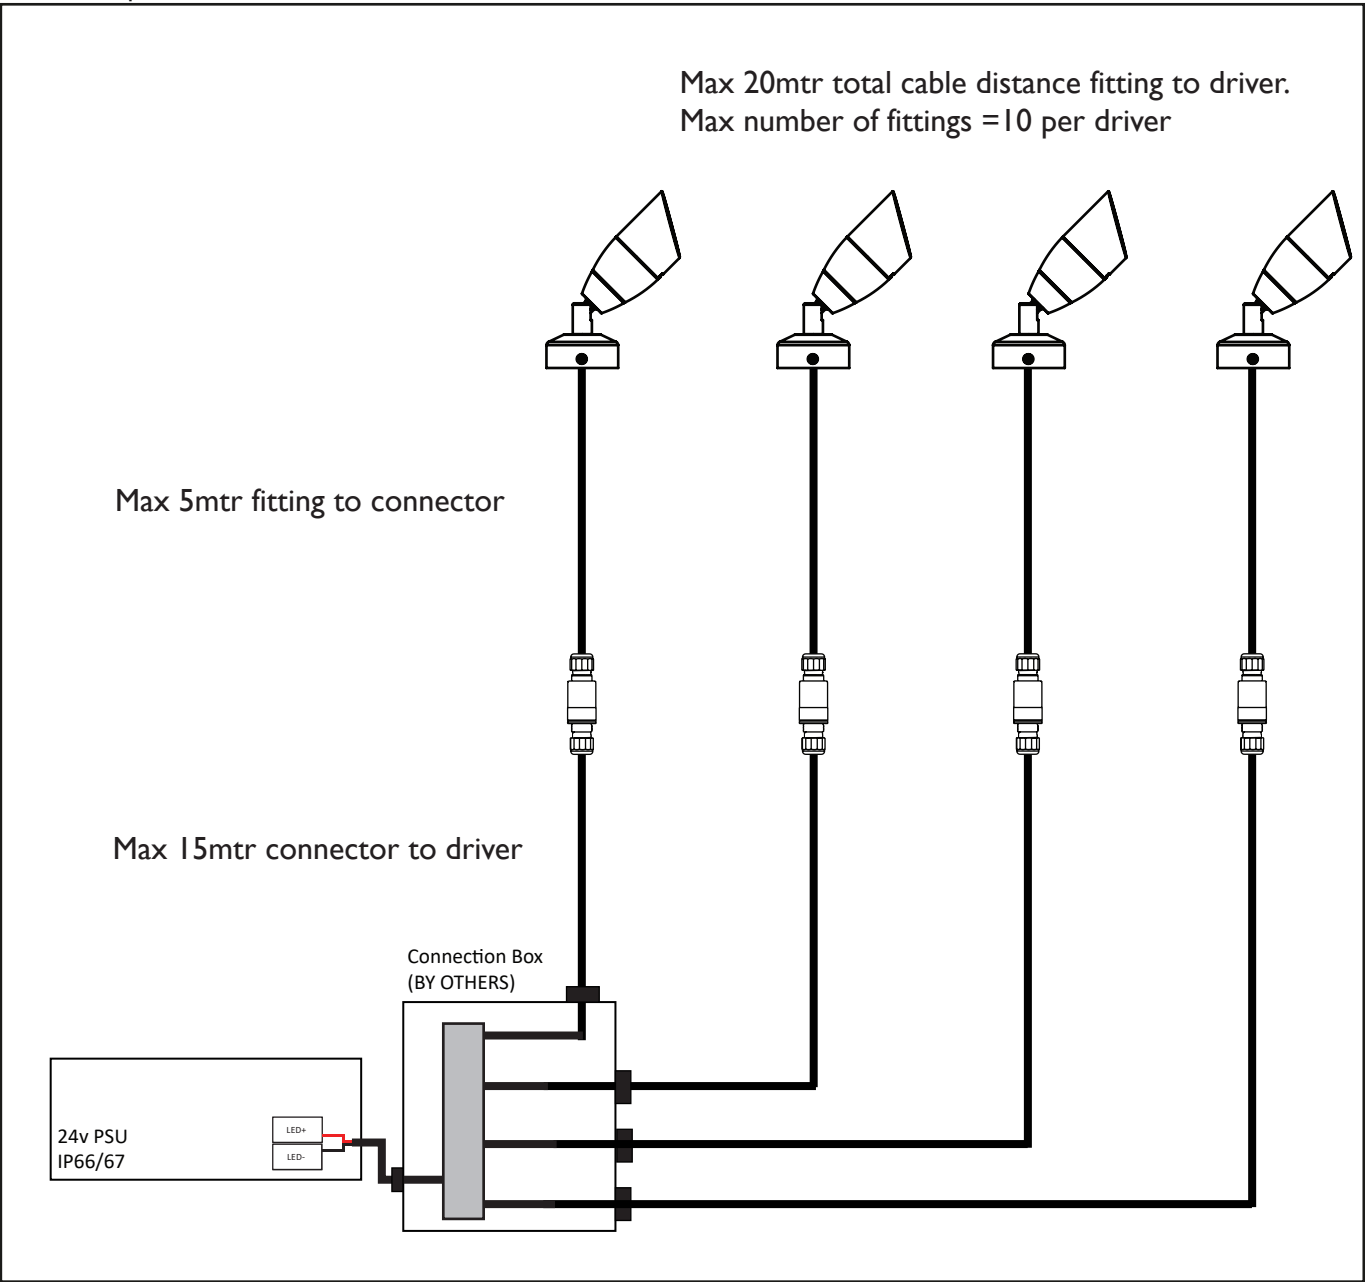

Based on a max CSA of 0.75mm² cable.

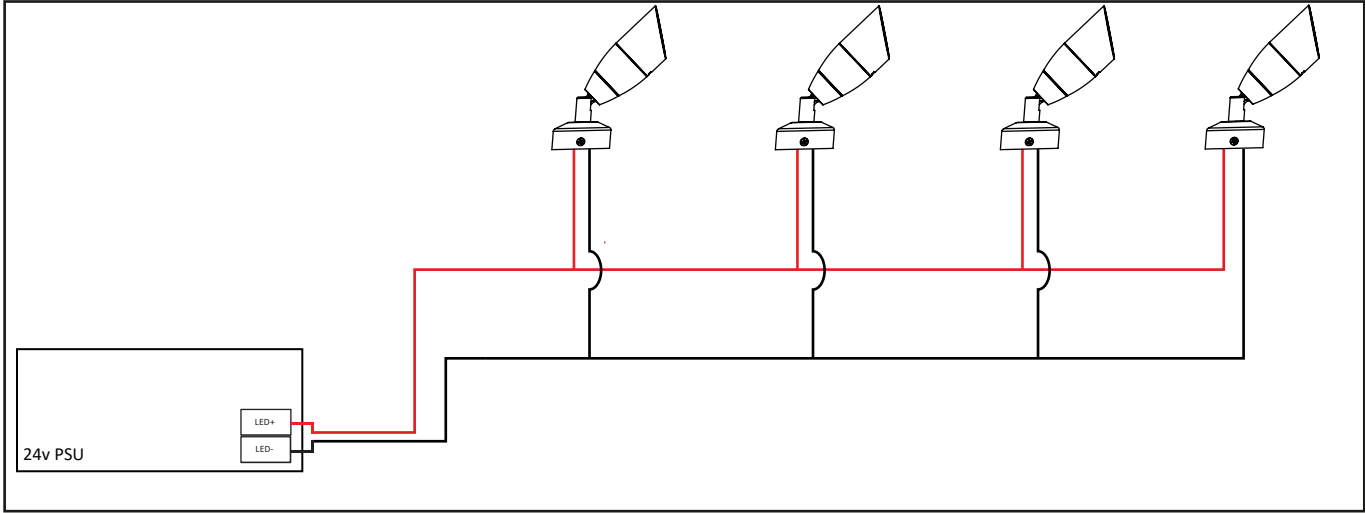 

Parallel wiring Vista products.