



## Installation Instructions


### For InWall IW5056, IW4080

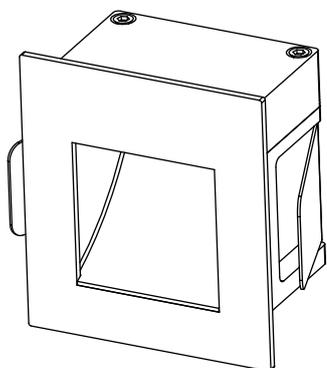


IW5056-XX-XXX-XX

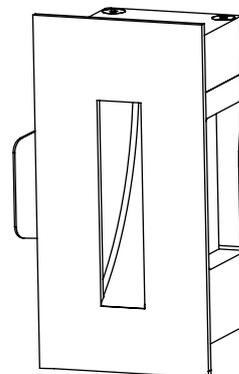


IW4080-XX-XXX-XX

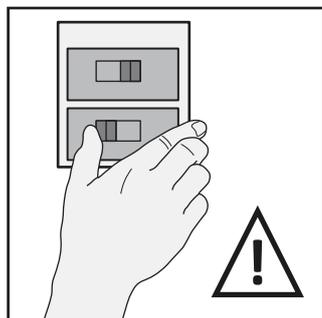


Switch off mains power before installation.

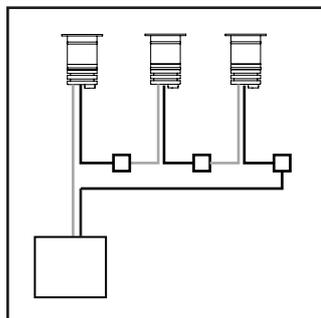

Products must be series wired. See page 5 for instructions.

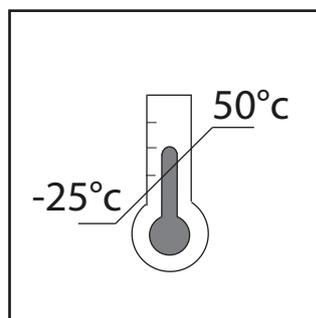

Max ambient temperature 50°C,  
Min ambient temperature -25°C.

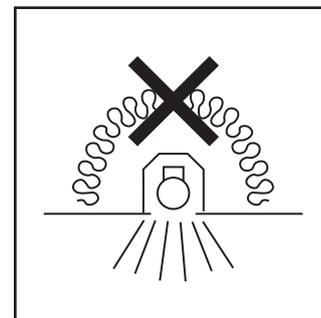


Do not cover luminaire with insulation material.


- Please read the following instructions carefully.
- Follow all national and local wiring and safety regulations.
- These products should only be installed by a qualified electrician.
- The light source contained in these luminaires shall only be replaced by the manufacturer, their service agent or a similarly qualified person.
- These products require an LED driver - **DO NOT CONNECT DIRECTLY TO MAINS POWER!**
- Connecting or disconnecting these luminaires while powered will damage the LED.
- Retain these instructions for future reference.

# Installation Instructions- Solid Wall


## For InWall IW5056, IW4080

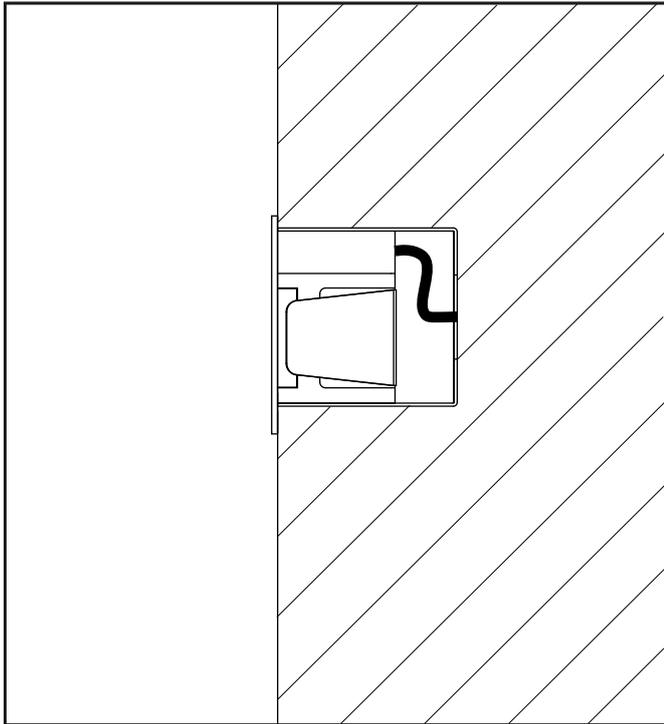


Mounting box for solid concrete or brick wall

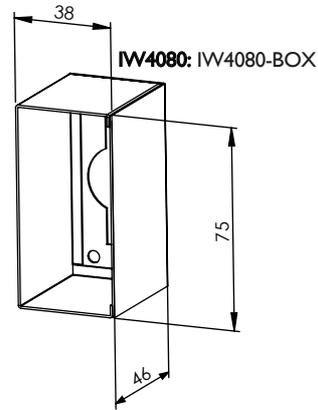


Mounting box dimensions

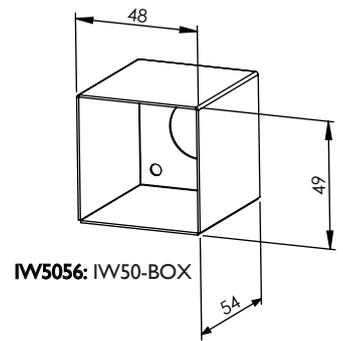


Mounting box dimensions

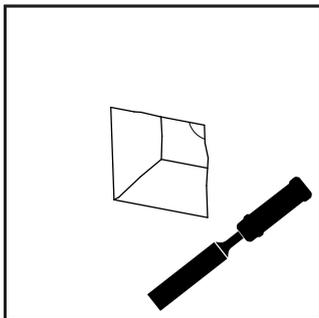


1. Prepare cut-out for mounting box and cable access. See above for actual box dimensions.

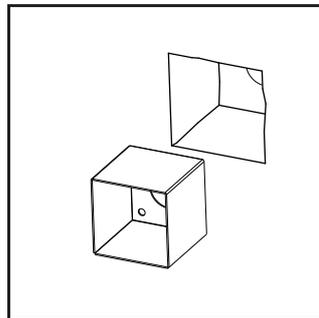


2. Place mounting box in cut-out. Check it is oriented correctly. (For IG5056 the arrow inside the box should point up)

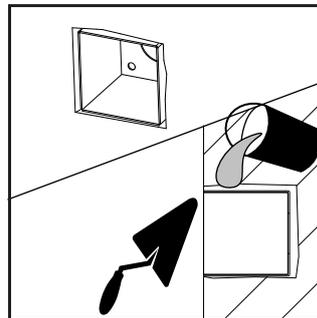


3. Secure box in cut-out with screws or bonding adhesive. Fill in any gaps around mounting box.

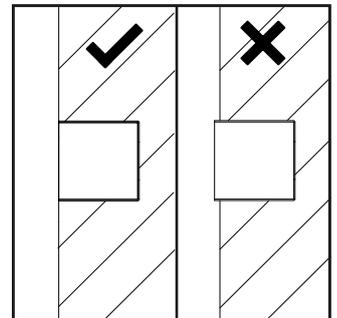


4. Front of the mounting box must be level with wall.

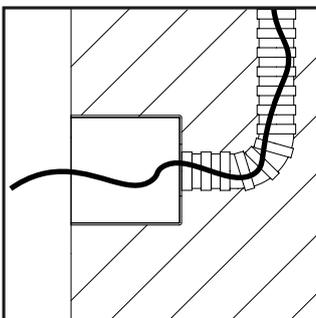


5. Run cable through Mounting box and cable access route.

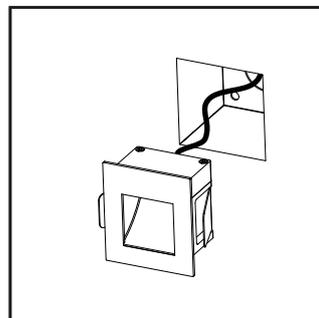

6. Push InWall product into the mounting box. It should sit flat against the wall.

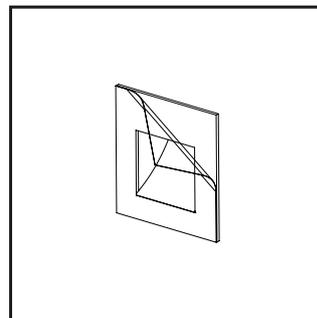


7. Remove protective film before use.


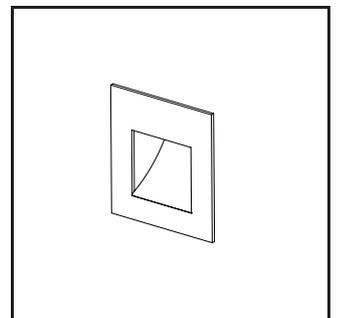


8. Finished installation.


## Installation Instructions- Hollow Wall For InWall IW5056, IW4080

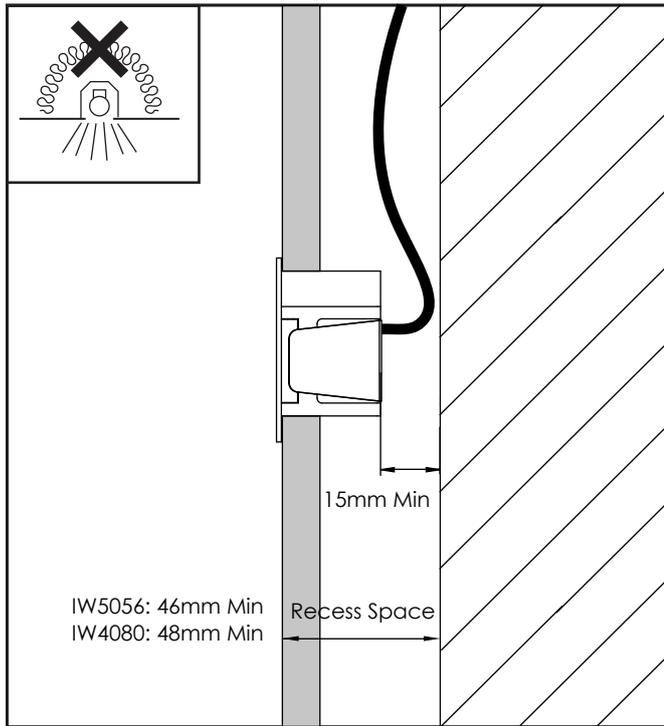


Plaster board wall installation. Do not cover with insulation material.

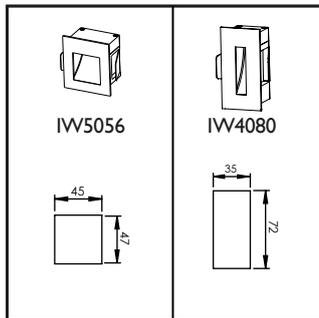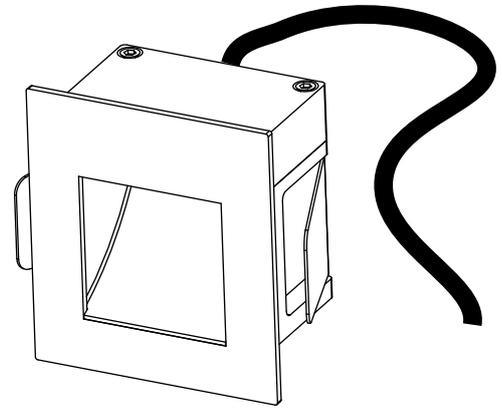


1. Cutout size.

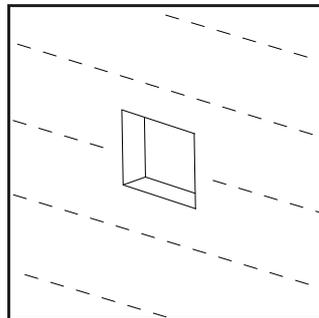


2. Prepare cutout in surface

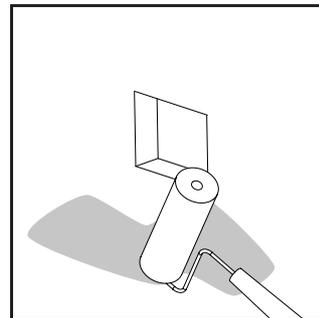


3. Finish wall.

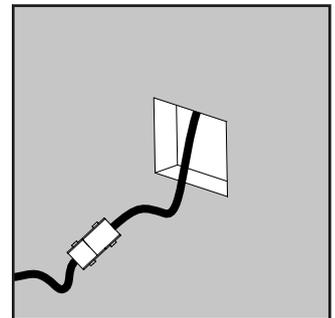


4. Make connection with driver.

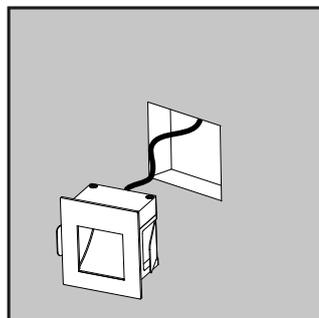

5. Press springs toward the luminaire body and insert into the wall cut-out.

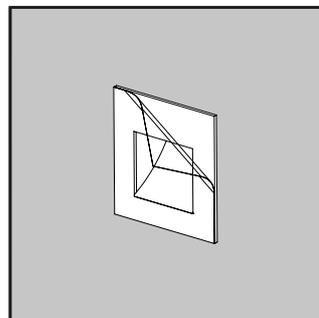


6. Remove protective film

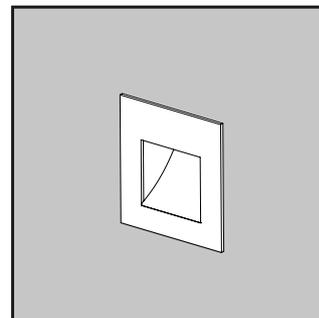


7. Finished installation


## Installation Instructions For InWall IW5056, IW4080

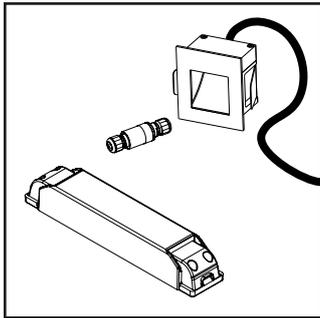


First plan the layout, including where drivers and connectors will be located.

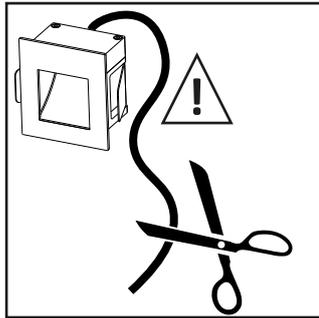



Be careful not to damage outer sheath of cable when making connections.

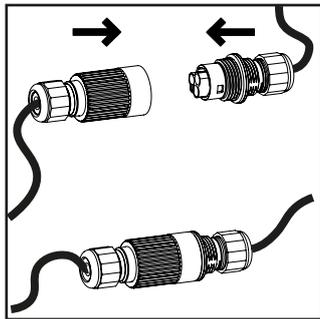


All outdoor wiring connections must be made with waterproof connectors and located inside enclosures for added protection

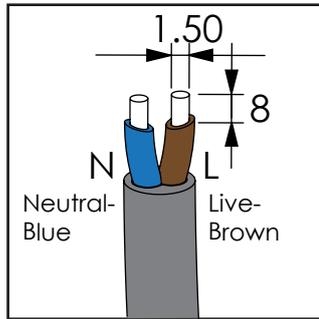


Cable conductor max size 2 x 1.5mm.

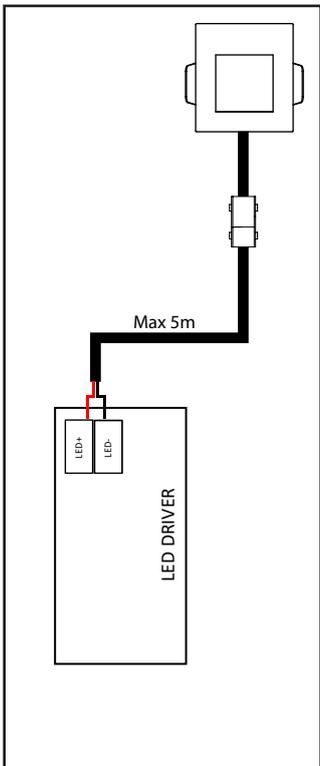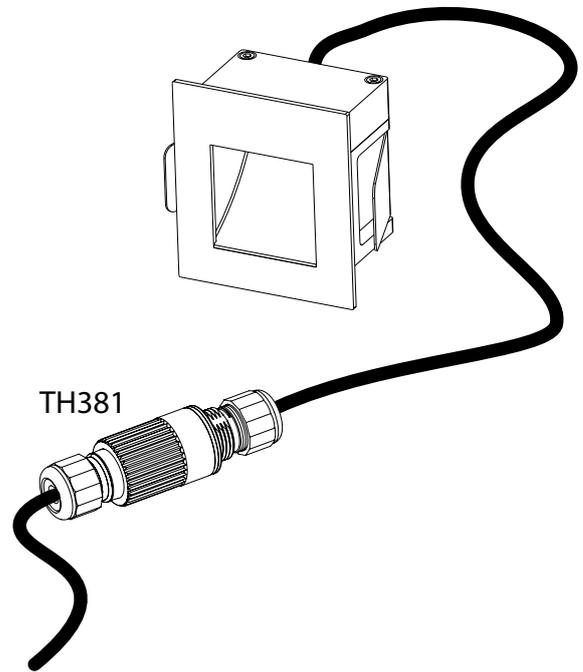

Indoor applications

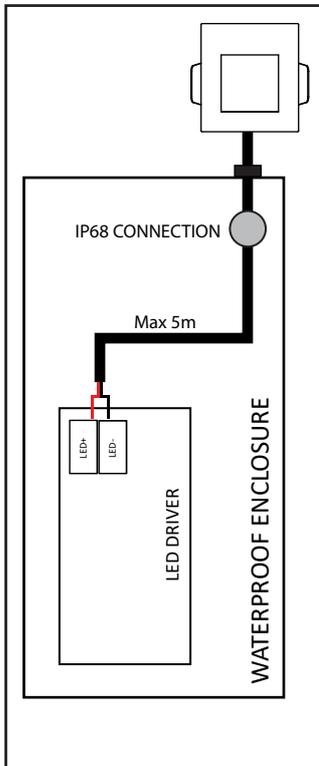


Outdoor applications. Enclosure must kept above ground.

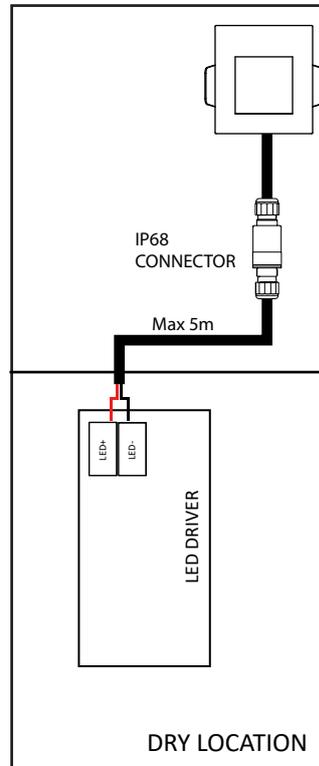


Outdoor remote driver


## Installation Instructions For InWall IW5056, IW4080

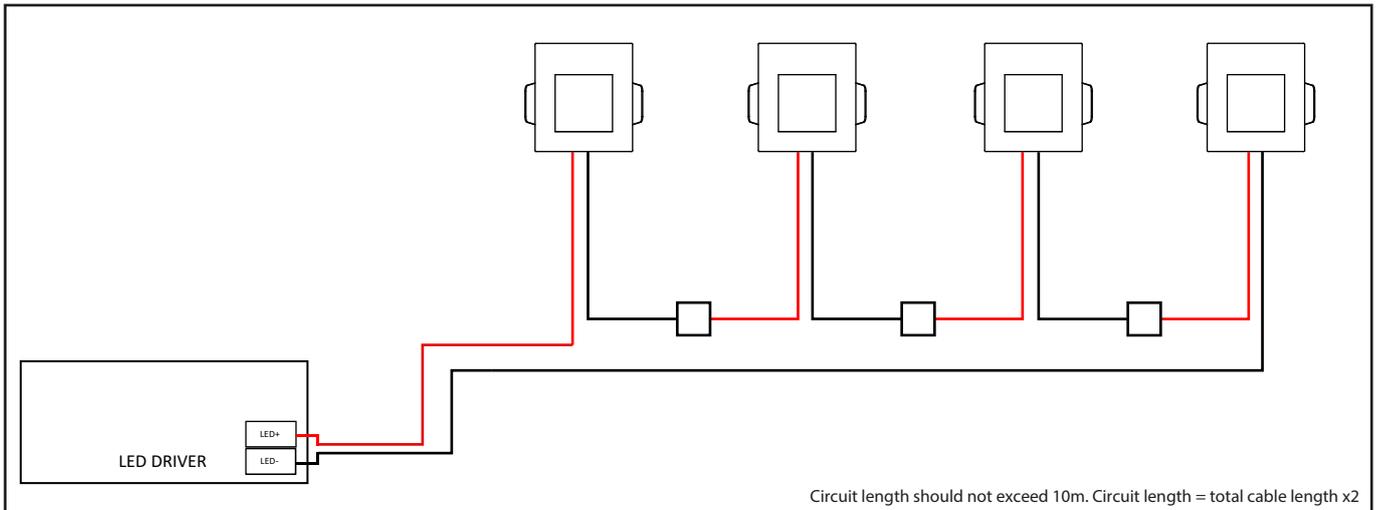

Series wiring InWall products.

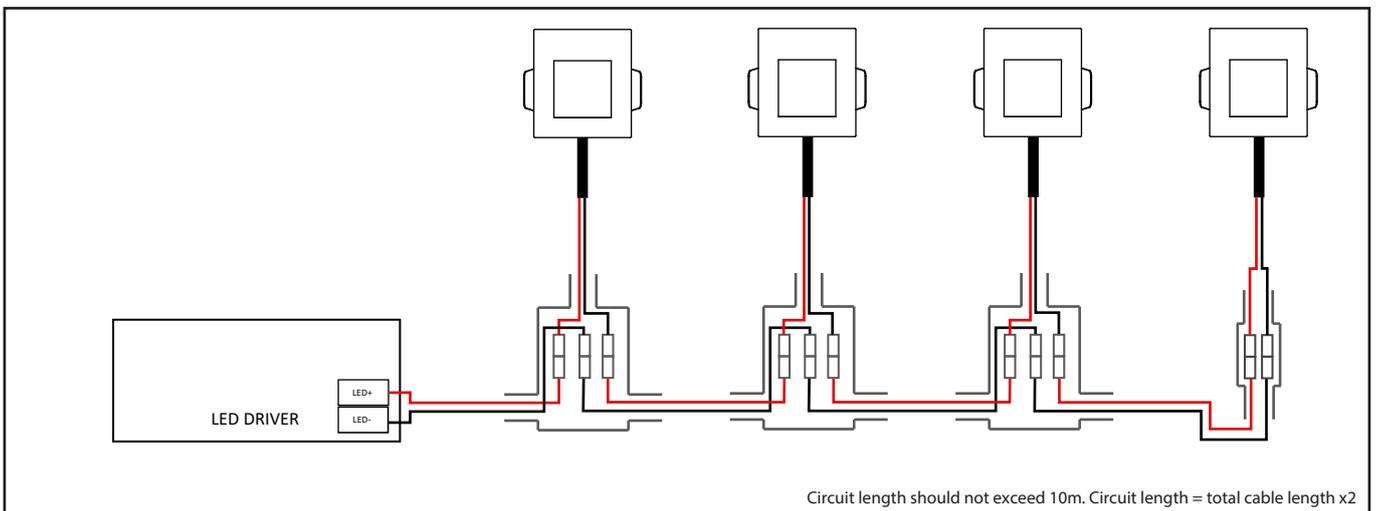

Series wiring InGround products using wiring boxes.

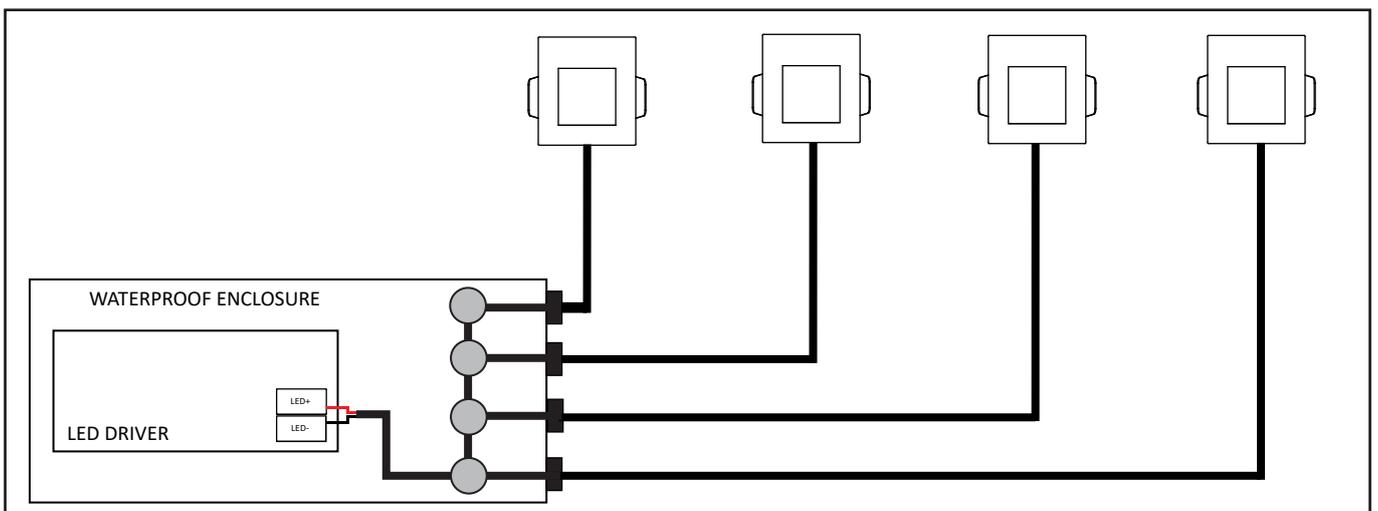

Series wiring InGround products inside driver enclosure.