



## Installation Instructions: ProSpex Plus XL Round Trimless




**MAINS POWER TO BE SWITCHED OFF  
DURING INSTALLATION.**

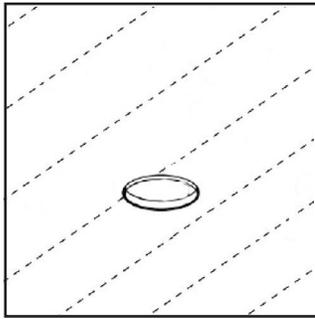


**1) Cut hole as follows:  
140mm diameter.**

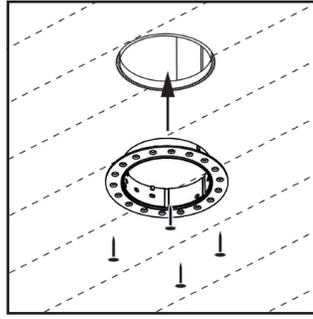


**2) Install trimless installation kit.  
Note alignment marks and fit  
accordingly (see note type WW)**

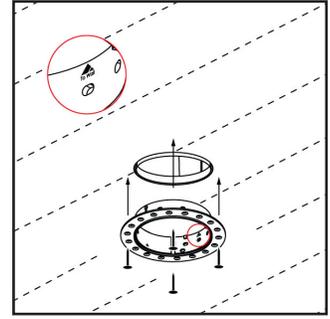


**Note Type WW (Wallwash):  
Install trim kit with mark "To  
Wall" with Wall to be lit.**

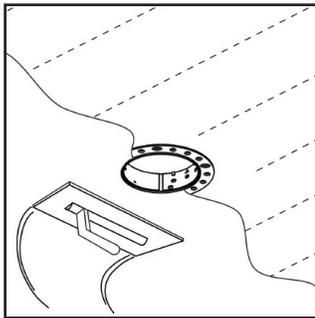

**3) Plaster the ceiling.**

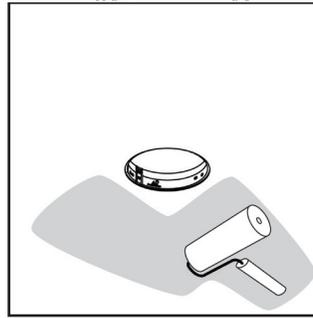


**4) finish ceiling as required.**

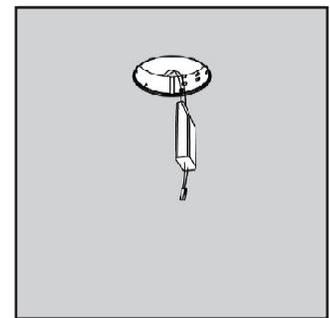


**5) Install driver/control gear.**


### Fixed fitting ref 090+XL-xx-TL / 090+XL-33-xx-TL

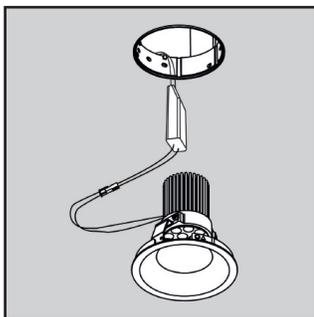


**1) Connect the control gear.**

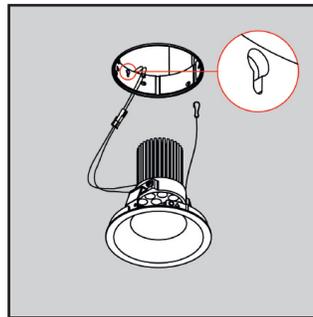


**2) Fit safety chain through the  
keyhole slot.**

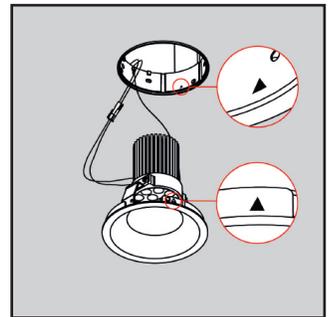

**3) Align with indicator marks.**

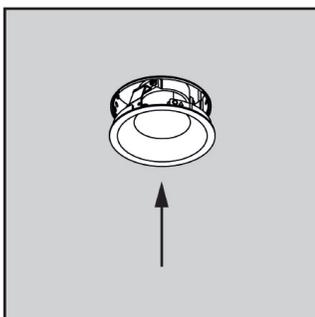


**4) Install the body into the  
installation kit.**

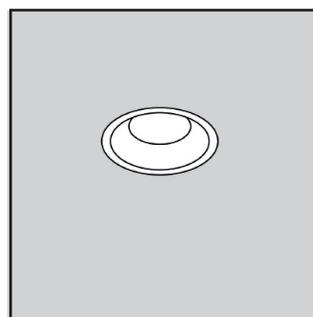


**5) Installation is complete**


**Fixed fitting ref 090+XL-xx-TL / 093+XL-33-xx-TL**

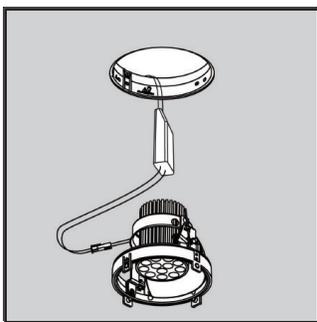


1) Connect the control gear.

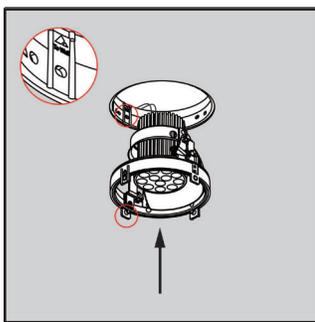


2) Align the body with the installation kit and fit.

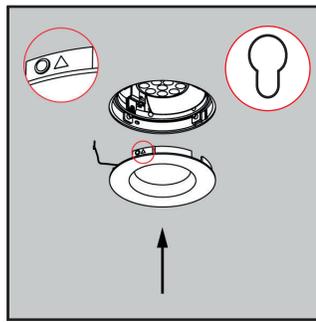


3) Fit safety chain into keyhole slot.

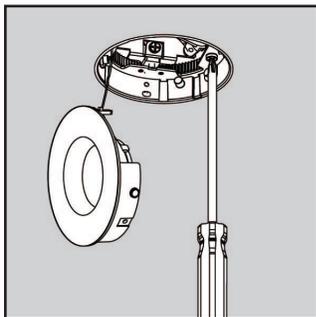


4) Adjust rotation using screwdriver.

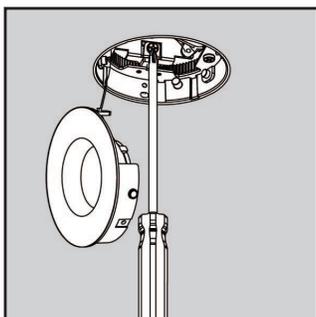

5) Adjust tilt using screwdriver.

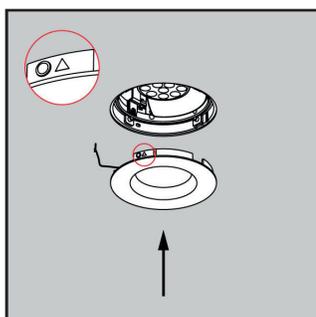


6) Align cover with indicator and fit.

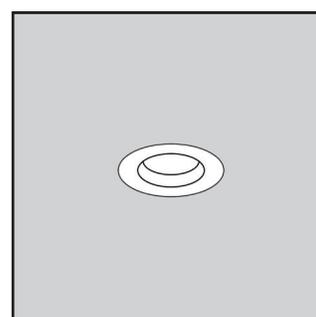


6) Installation is complete.


**Fixed fitting ref 090+XL-xx-TL-WW**

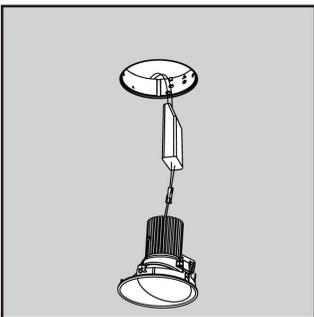


1) Connect the control gear.

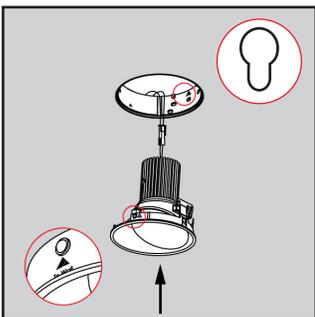


2) Attach safety wire to keyhole. Align body with trim kit. Install.

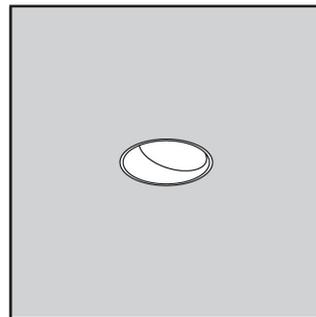

3) Installation is complete

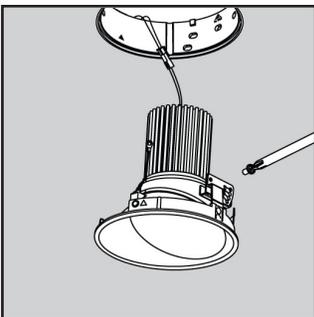

If required, adjust the module angle by removing the screw from position 0.

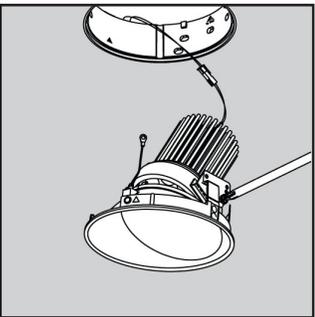

Reposition module and reinstall the screw in the required position.