



Installation Instructions for trimless fitting


! MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

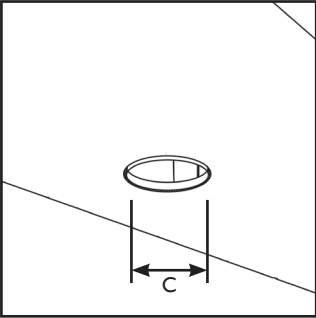


1. Plasterboard installation
Cutout: Ø83mm

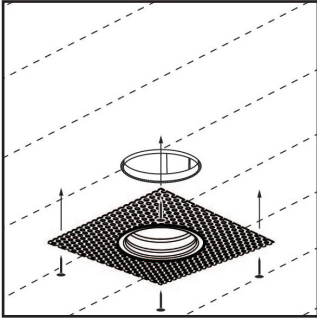


2. Trimless plaster-in kit installation

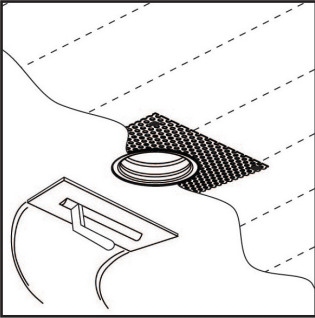


3. Plaster-in and allow to dry fully

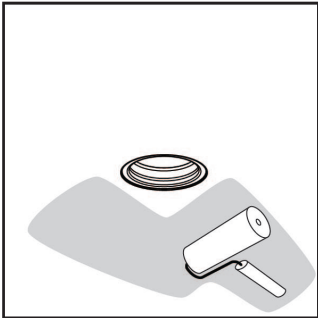


4. Paint and allow to dry fully

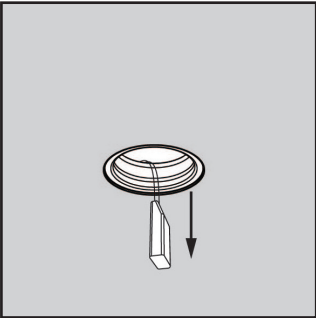


5. Dropdown of power supply

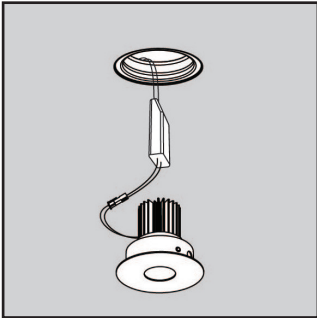


6. Fixture wiring connection

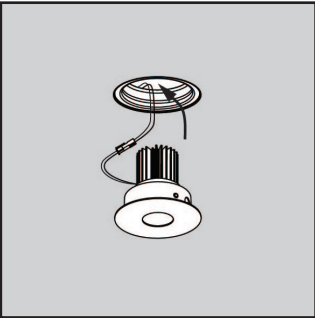

7. Power supply re-installation

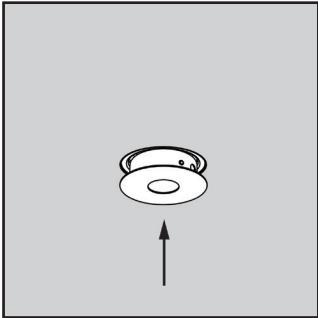


8. Align fixture with trimless kit and install then install front plate

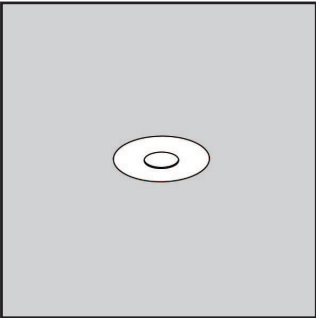


9. Finished Installation


Fixture Adjustment Instructions

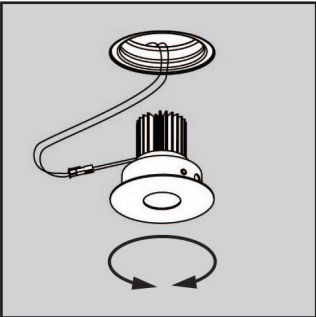

1. Remove fixture from trimless kit and adjust rotation

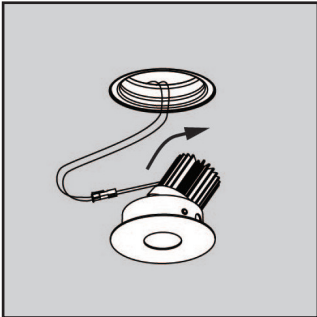

2. Adjust tilt

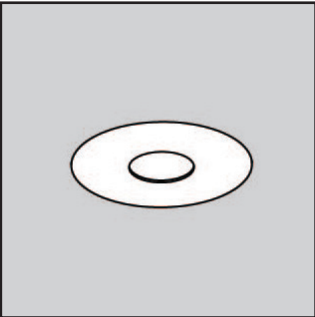

3. Replace fixture in trimless kit