



Installation Instructions for trim fitting


! MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

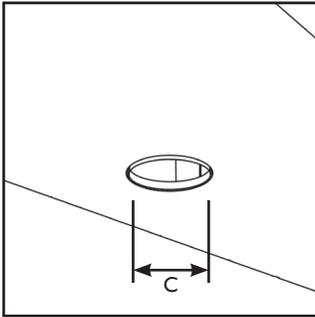


1. Plasterboard installation
Cutout (C): Ø83mm

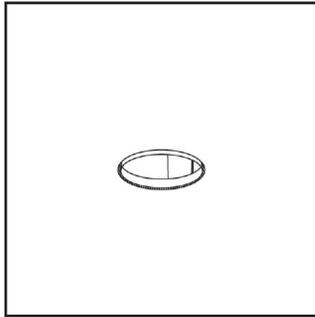


2. Finish ceiling face

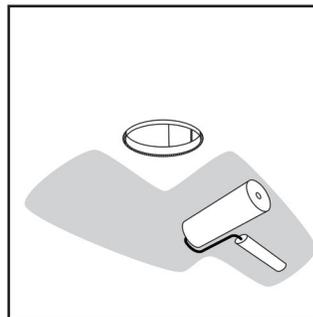


3. Paint and allow to dry fully

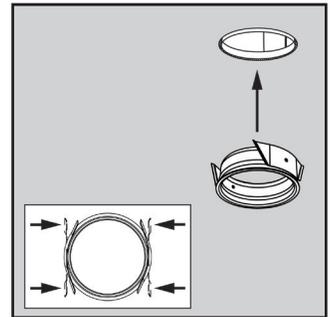


4. Trim kit installation

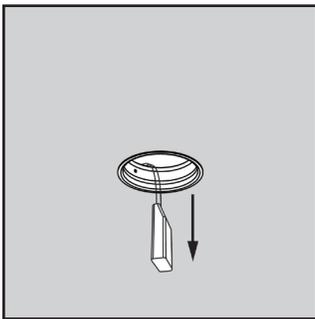


5. Dropdown of power supply

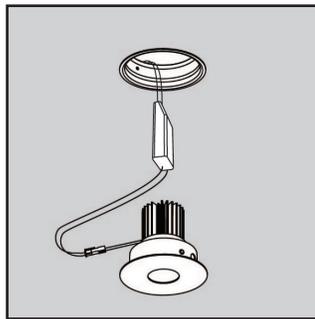


6. Fixture wiring connection

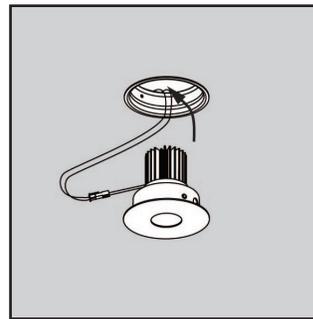

7. Power supply re-installation

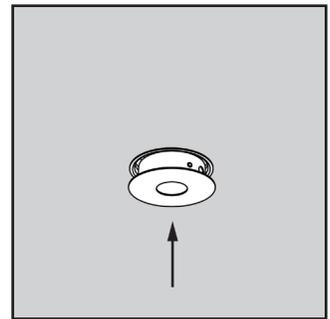


8. Align fixture with trim kit and install then install front plate

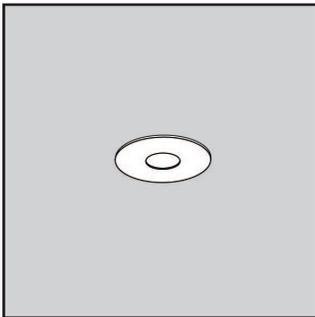


9. Finished Installation


Fixture Adjustment Instructions

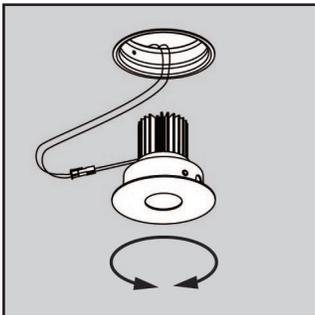

1. Remove fixture from trim kit and adjust rotation

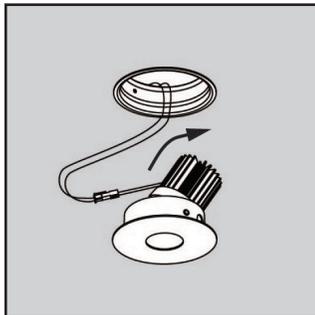

2. Adjust tilt

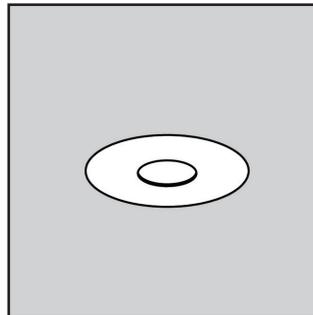

3. Replace fixture in trim kit