

Installation Instructions


For Micro40 Flare, Conical, Pinhole Edge, Focus, Focus Accent and Soft Flange




MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

Cut hole as follows:	
Flare	Ø 1.42" / 36mm
Conical	Ø 1.42" / 36mm
Pinhole Edge	Ø 1.38" / 35mm
Focus Fixed	Ø 1.42" / 36mm
Focus Accent	Ø 1.42" / 36mm
Soft Round	Ø 1.46" / 37mm


1. Cutout sizes

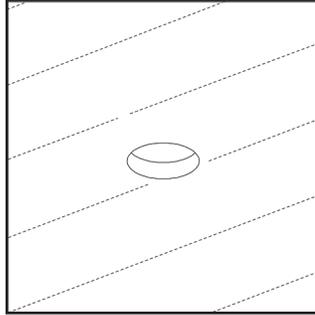


2. Plasterboard installation

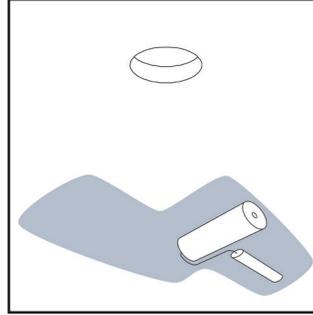


3. Finish ceiling

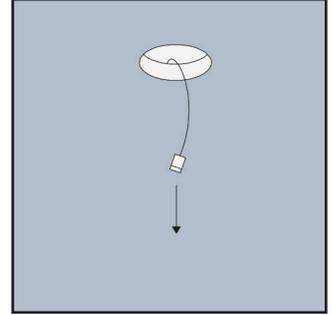


4. Dropdown of power supply connector

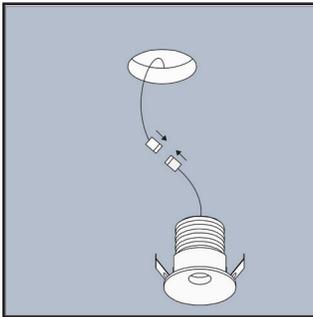

5. Fixture wiring connection

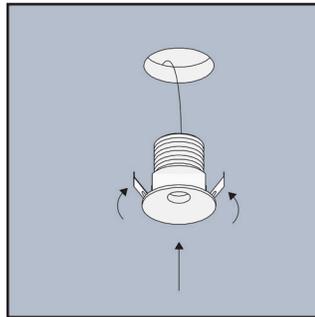

6. Press springs towards luminaire body and insert into ceiling cutout

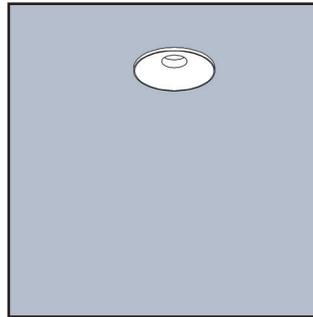

7. Finished installation

Installation Instructions


For Micro40 Flare, Conical, Pinhole Edge, Focus and Focus Accent Flangeless




MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

Cut hole as follows:	
Flare	Ø 1.46" / 37mm
Conical	Ø 1.46" / 37mm
Pinhole Edge	Ø 1.46" / 37mm
Focus	Ø 1.46" / 37mm
Focus Accent	Ø 1.46" / 37mm


1. Cutout sizes

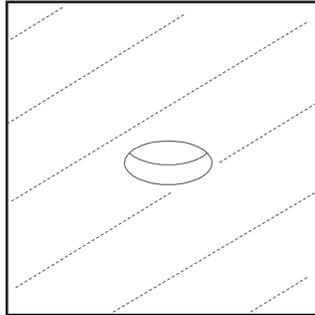


2. Plasterboard installation

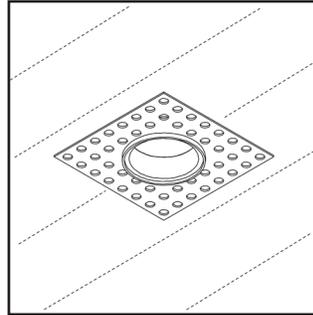


3. Flangeless mud in kit installation

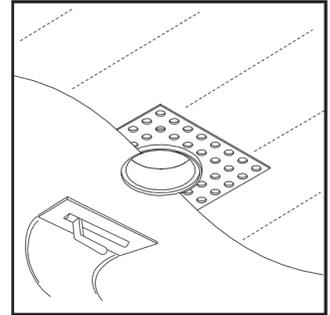


4. Mud in and allow to dry fully

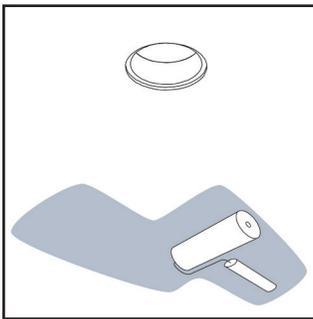


5. Paint and allow to dry fully

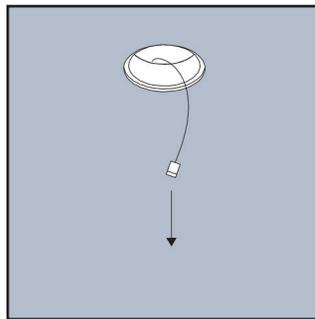


6. Dropdown of power supply connector

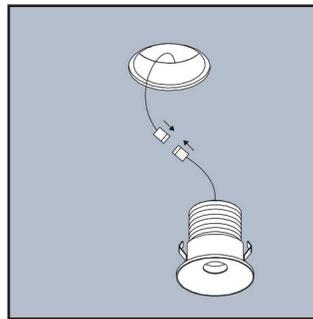

7. Fixture wiring connection

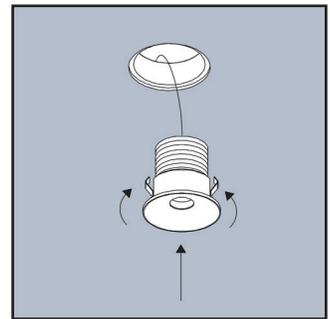

8. Press springs towards luminaire body and insert into mud in kit

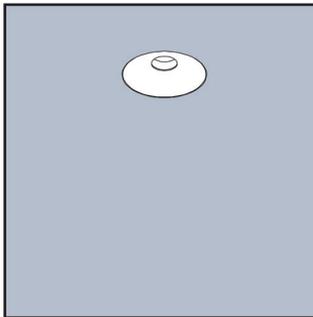

9. Finished installation