




Installation Instructions

For Micro40 Pyramidal, Square Edge and Soft Square Flange



MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

Cut hole as follows:	
Pyramidal	1.46" x 1.46" 37mm x 37mm
Square Edge	1.46" x 1.46" 37mm x 37mm
Soft Square	1.46" x 1.46" 37mm x 37mm

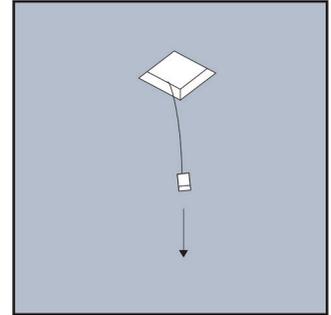
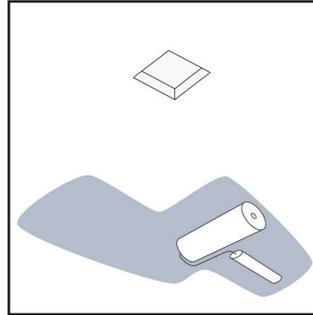
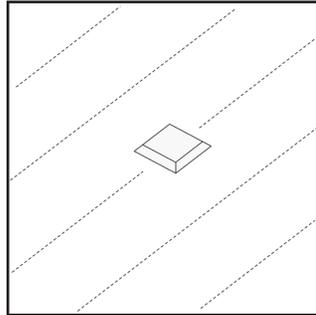


1. Cutout sizes

2. Plasterboard installation

3. Finish ceiling

4. Dropdown of power supply connector

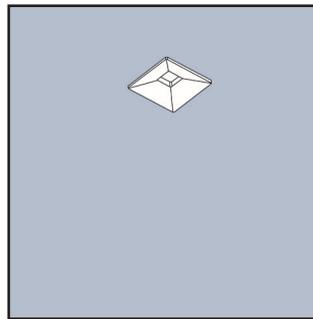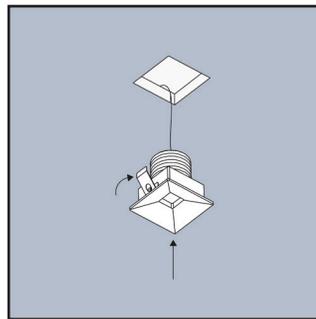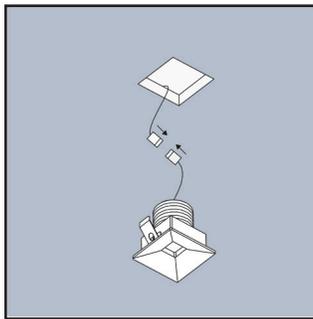

5. Fixture wiring connection

6. Press springs towards luminaire body and insert into ceiling cutout

7. Finished installation


Installation Instructions

For Micro40 Pyramidal and Square Edge Flangeless




MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.


Cut hole as follows:	
Pyramidal	1.5" x 1.5" 38mm x 38mm
Square Edge	1.5" x 1.5" 38mm x 38mm

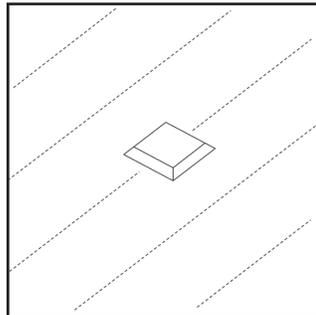


2. Plasterboard installation

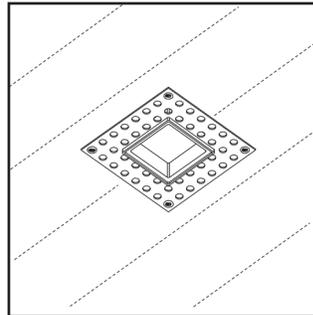


3. Flangeless mud in kit installation

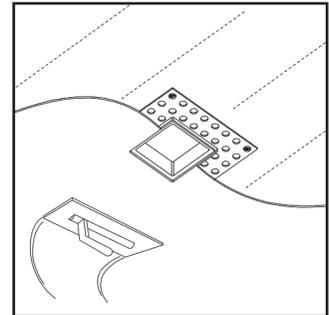


4. Mud in and allow to dry fully

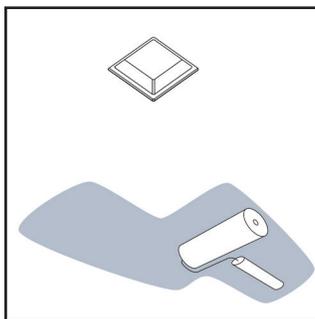


5. Paint and allow to dry fully

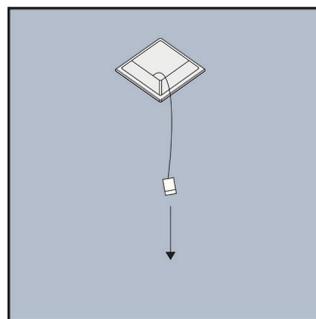


6. Dropdown of power supply connector

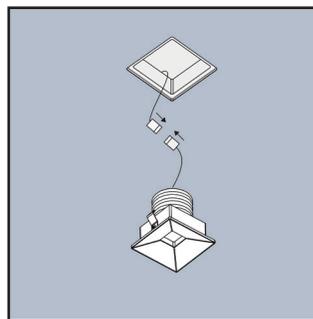

7. Fixture wiring connection

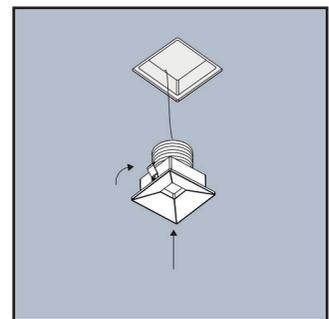

8. Press springs toward luminaire body and insert into mud in kit

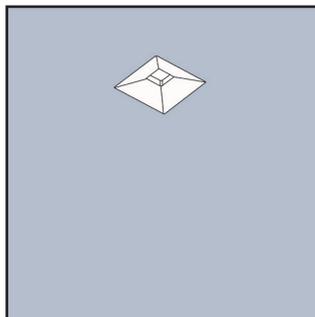

9. Finished installation