



## Installation Instructions for 3.5" Axis Flangeless with Housing

For Insulated and Non-Insulated Ceiling type installations


**! MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

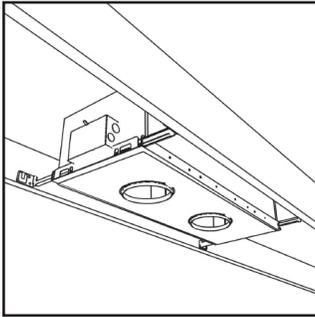


1. Fixing of housing

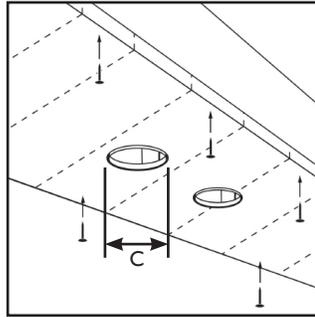


2. Plasterboard installation  
Cutout (C): Ø4.17" (106mm)

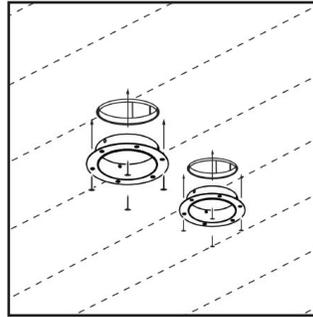


3. Trimless mud in kit installation

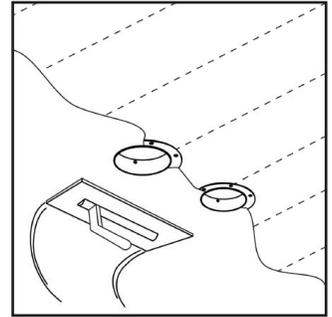


4. Mud in and allow to dry fully

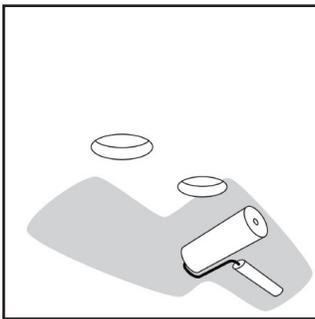


5. Paint and allow to dry fully

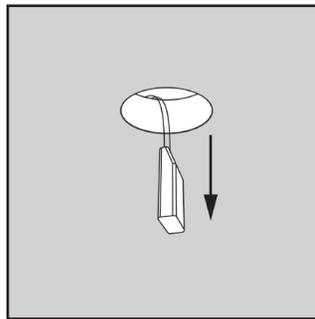


6. Dropdown of power supply

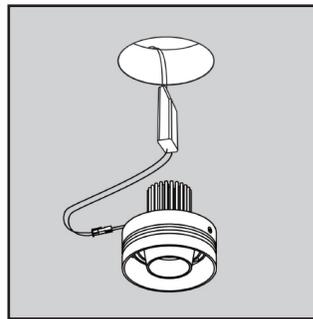


7. Fixture wiring connection

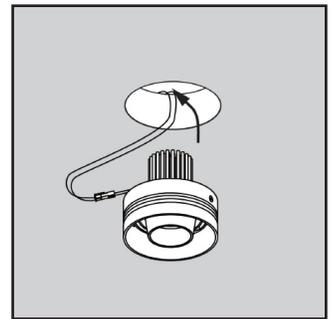


8. Power supply re-installation

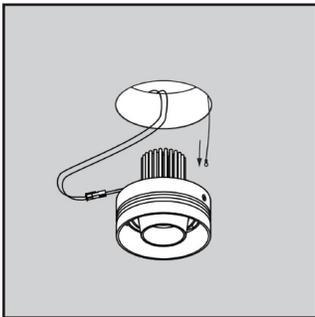

9. Safety wire connection

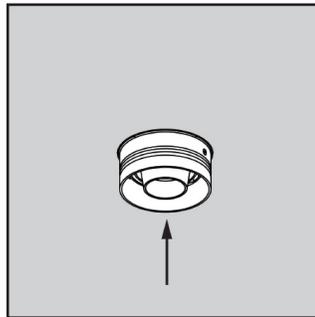


10. Align fixture with trimless kit  
and Install

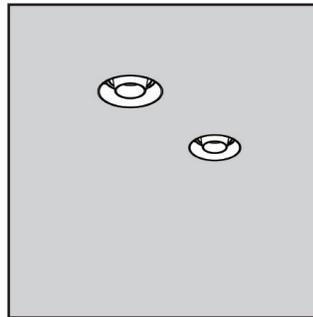


11. Finished Installation

## Fixture Adjustment Instructions

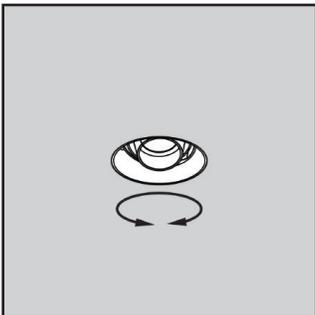

1. Adjust rotation

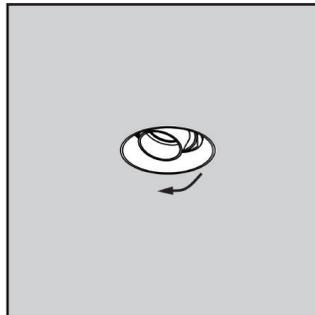


2. Adjust tilt

## Installation Instructions for 3.5" Axis Flangeless with Tray


For Insulated and Non-Insulated Ceiling type installations




**MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

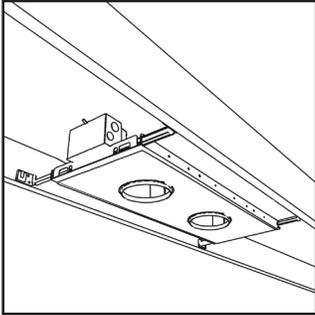


1. Fixing of housing

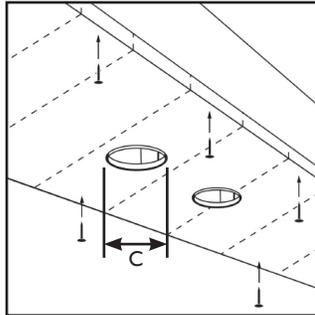


2. Plasterboard installation  
Cutout (C): Ø4.17" (106mm)

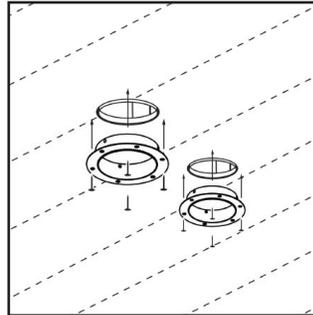


3. Trimless mud in kit installation

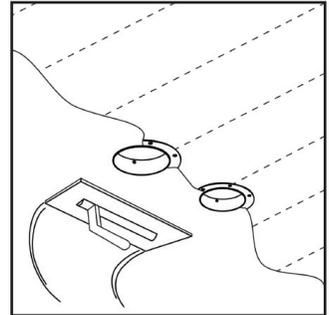


4. Mud in and allow to dry fully

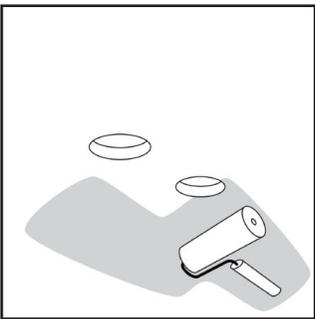


5. Paint and allow to dry fully

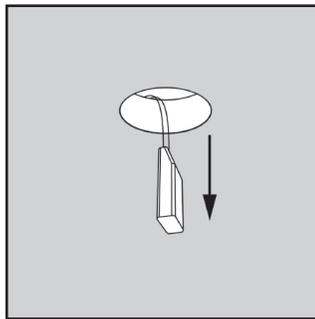


6. Dropdown of power supply

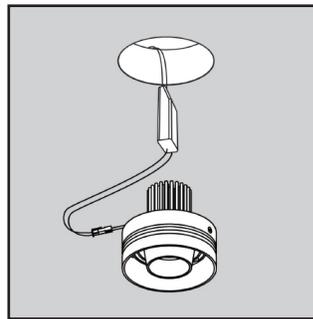


7. Fixture wiring connection

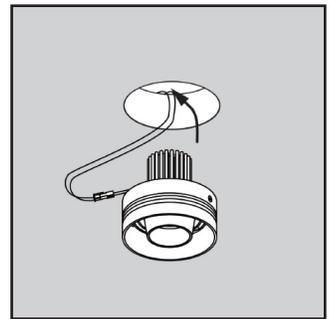


8. Power supply re-installation

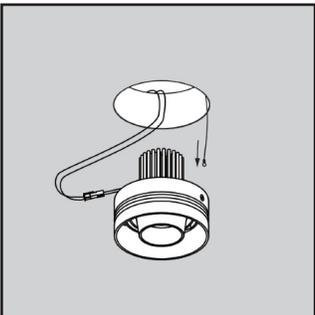

9. Safety wire connection

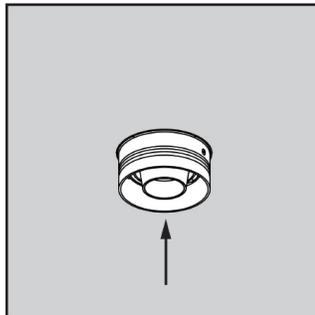


10. Align fixture with trimless kit  
and Install

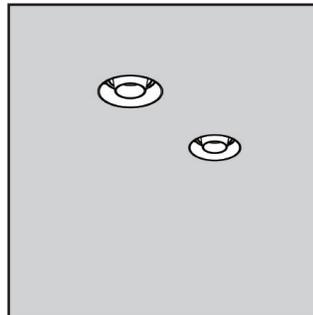


11. Finished Installation

### Fixture Adjustment Instructions

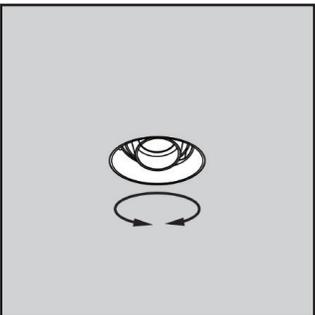

1. Adjust rotation

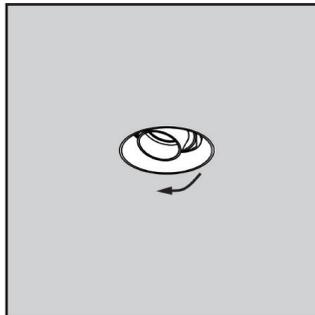

2. Adjust tilt