



Installation Instructions for Plus 3.5" Pinhole Flangeless Fixed with Housing

For Insulated and Non-Insulated Ceiling type installations


 **MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.**

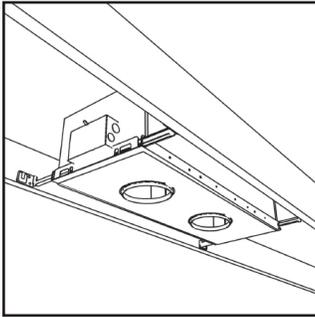


1. Fixing of housing

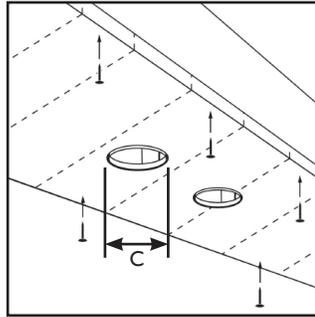


2. Plasterboard installation
Cutout (C): Ø4" (102mm)

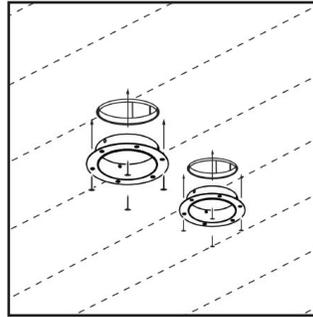


3. Trimless mud in kit installation

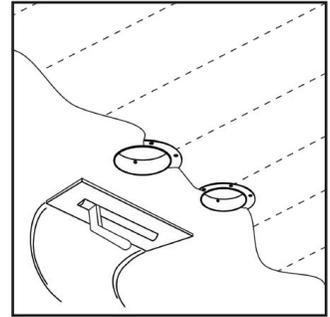


4. Mud in and allow to dry fully

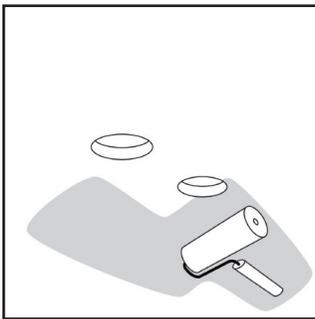


5. Paint and allow to dry fully

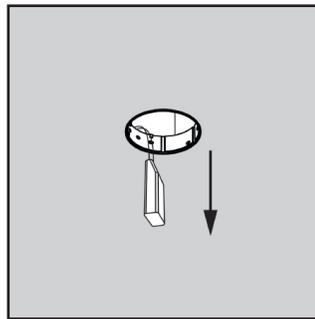


6. Dropdown of power supply

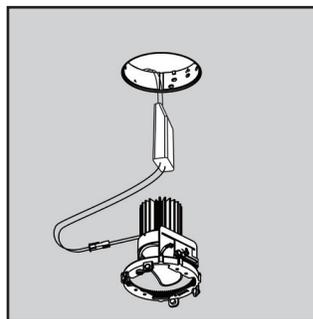


7. Fixture wiring connection

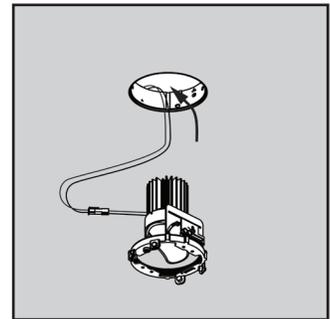


8. Power supply re-installation

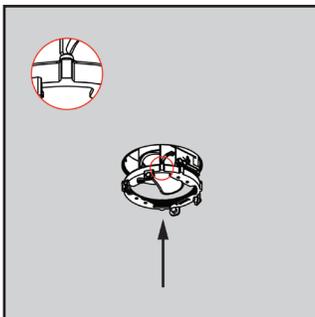

9. Align fixture with trimless mud in kit and Install

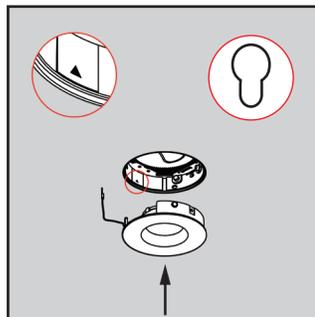

10. Attach safety wire to keyhole.
Align cover with indicator and Install

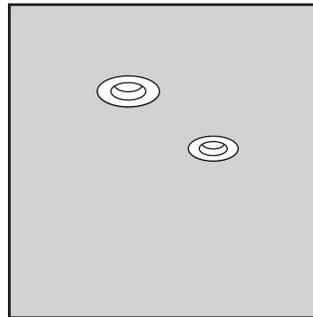


11. Finished Installation


Installation Instructions for Plus 3.5" Pinhole Flangeless Fixed with Tray

For Insulated and Non-Insulated Ceiling type installations


⚠ MAINS POWER TO BE SWITCHED OFF DURING INSTALLATION.

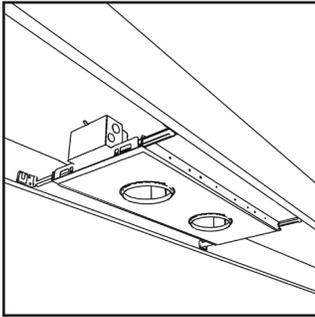


1. Fixing of housing

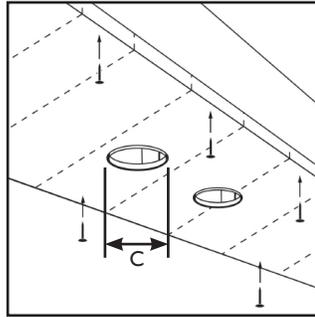


2. Plasterboard installation
Cutout (C): Ø4" (102mm)

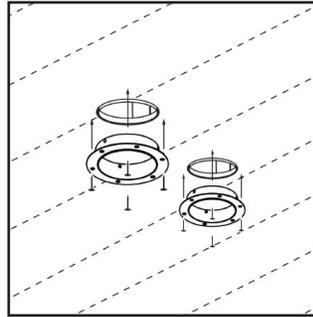


3. Trimless mud in kit installation

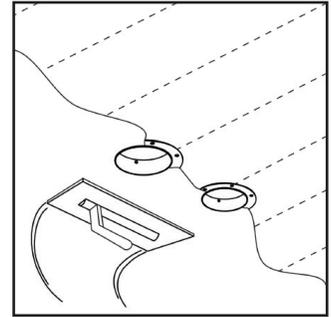


4. Mud in and allow to dry fully

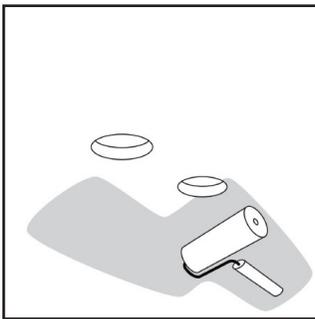


5. Paint and allow to dry fully

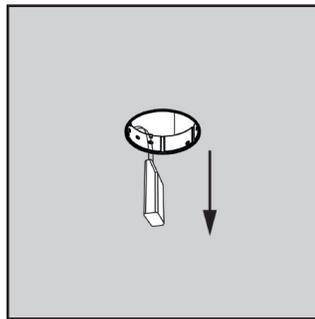


6. Dropdown of power supply

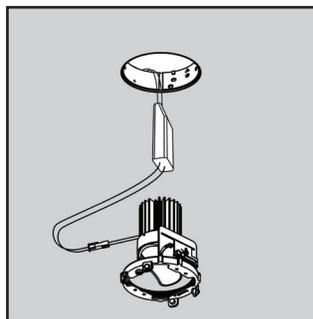


7. Fixture wiring connection

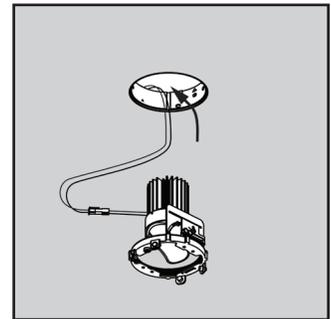


8. Power supply re-installation

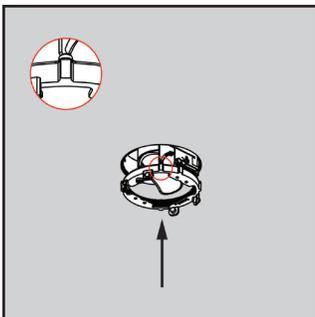

9. Align fixture with trimless mud in kit and Install

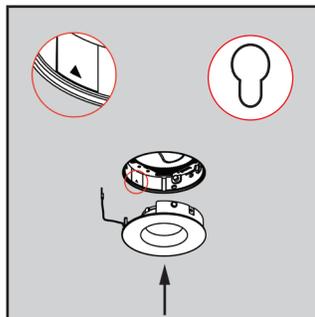

10. Attach safety wire to keyhole.
Align cover with indicator and Install

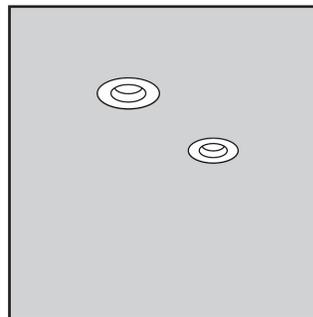

11. Finished Installation