



Installation Instructions: ProSpex Plus XL Square with Trim




**MAINS POWER TO BE SWITCHED OFF
DURING INSTALLATION.**

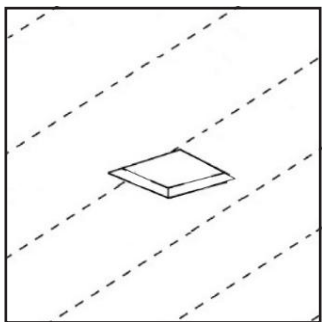


1) Cut hole as follows:
140 x 140mm.

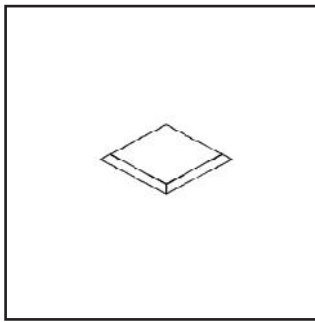


2) Finish the ceiling face as required.

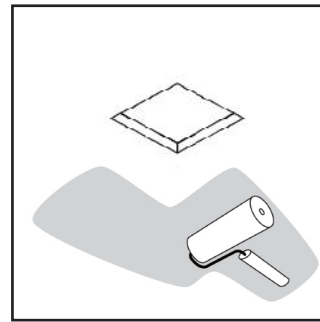


3) Paint the ceiling as required.

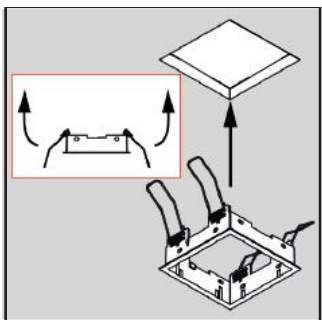

4) Install the trim kit. Note alignment marks and fit accordingly (see note typeWW).

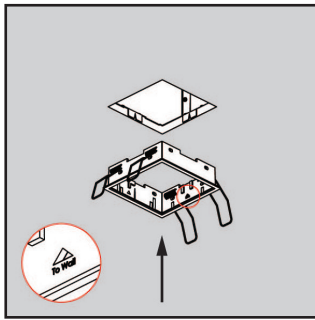


Note Wallwash:
Install trim kit with mark "To Wall" with Wall to be lit.

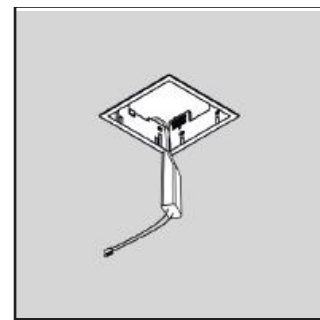


5) Install driver/control gear.


Fixed fitting ref 090+XL-xx-TR-SQ / 090+XL-33-xx-TR-SQ

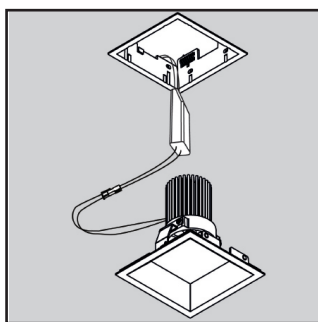


1) Connect the control gear.

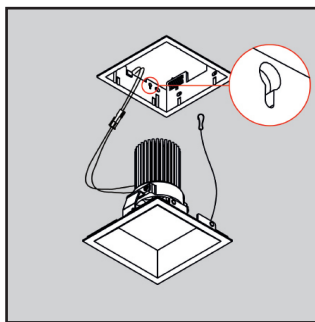


2) Fit safety chain through the keyhole slot.

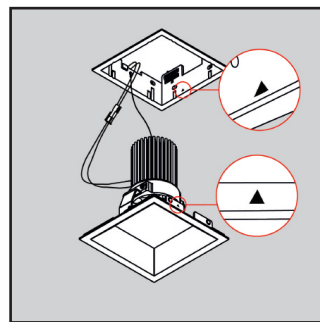

3) Align with indicator marks.

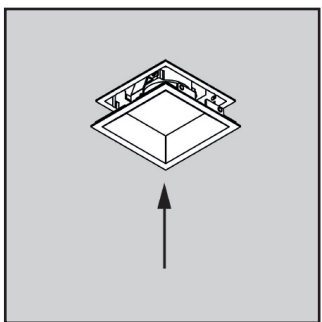


4) Install the body into the installation kit.

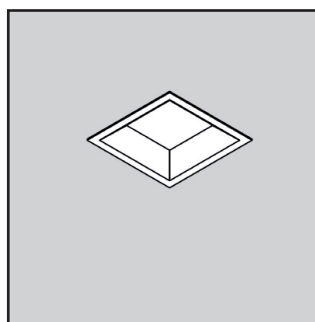


5) Installation is complete


Fixed fitting ref 090+XL-xx-TR-SQ / 093+XL-33-xx-TR-SQ

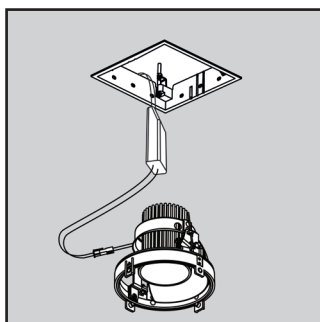


1) Connect the control gear.

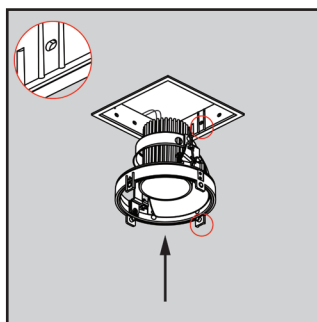


2) Align the body with the installation kit and fit.

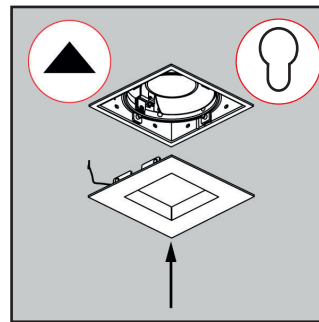


3) fit safety chain into keyhole slot.

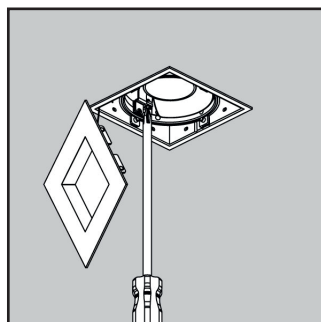


4) Adjust rotation using screwdriver.

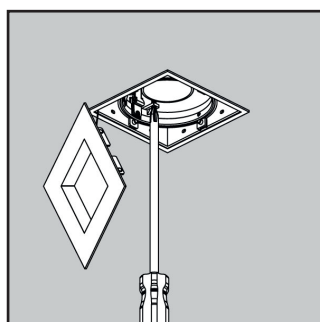

5) Adjust tilt using screwdriver.

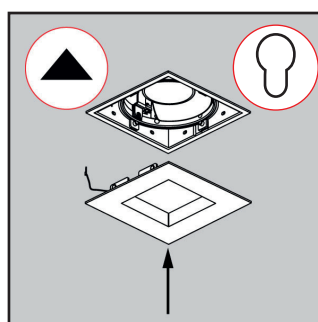


6) Align cover with indicator and fit.

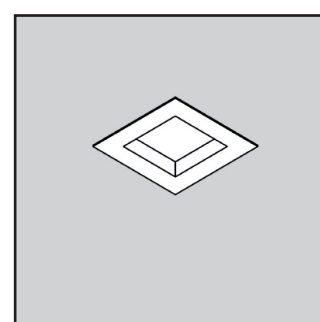


6) Installation is complete.


Fixed fitting ref 090+XL-xx-TR-SQ-WW

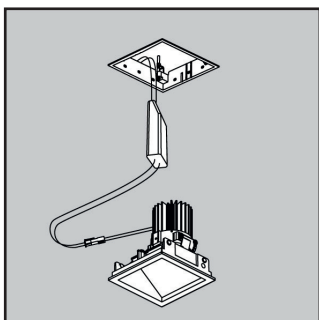


1) Connect the control gear.

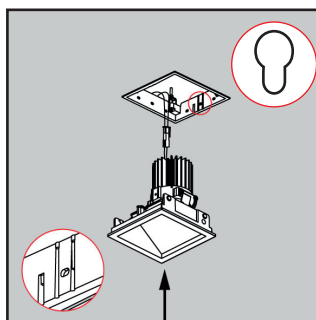


2) Align the body with the installation kit and fit.

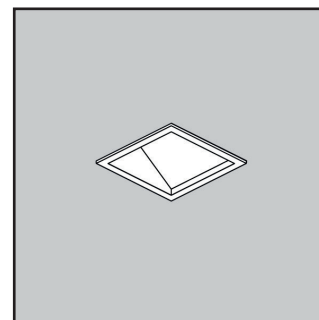

3) Installation is now complete.

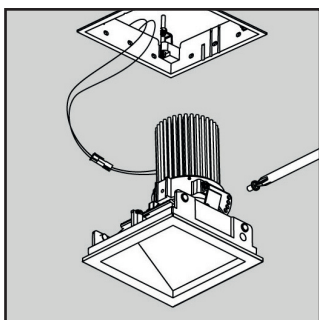

If required, adjust the module angle by removing the screw from position 0.

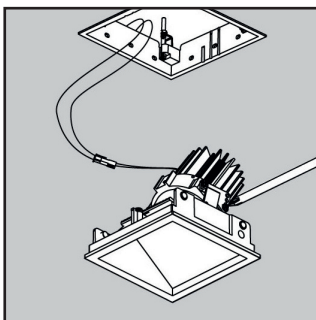

Reposition module and reinstall the screw in the required position.